

Arming & Disarming

1. **How To Disarm**

- Enter a valid user code.
- The red *ARMED* light will turn off, and the tone will stop.

2. **How To Arm**

- The green ready light must be on, ensure all protected areas are secure.
- Enter a valid code.
- The red *ARMED* light will come on.
- Leave the protected area.

3. **What To Do If Code Does Not Work**

- If code is not accepted press the [#] key to clear.
- Re-enter a valid code.
- The red *ALARM* light will go off for 'disarming', on for 'arming'.

4. **How To Night Arm**

- Ensure that zones to be bypass have been programmed for "AUTOMATIC BYPASS".
- Enter a valid user code and do not trip the entry/delay zone or other secure zones.
- The red *ARMED* light will come on.
- After the delay time is up the keypad will give one long beep with the bypassed zones illuminated on the keypad and the *PARTIAL* light will come on.
- A final long beep will occur about 30 seconds after.

5. **How To Fully Arm**

- Enter a valid user code to disarm the alarm.
- Re-enter code and leave premises.

Keypad Functions

6. **How To View Memory**

- Press [0] key. Wait 5 seconds.
- Lights will flash where alarm occurred and *PARTIAL* light also.

7. **How To Exit Memory**

- Lights will turn off after a few seconds.
- Keypad will return to normal status.

8. **How To Bypass Zones**

- To bypass press [*] + zones to bypass + [*].
- Zone lights will stay lit while bypassed.
- Arm system, *ARMED* light will be lit.

9. **How To Clear Bypasses**

- 1: enter valid code to disarm, all bypassed zones will disable, **or**
- 2: press [*] + zones to disable + [*].

10. **How To View Trouble**

- AC Light off indicates no power. Blinks when battery is low.
- *ARMED* Flashes for alarm memory if alarm was activated during arming cycle.
- *READY* Flashing means communicator trouble.
- *ZONES* Flashing means unsecured, steady means bypassed

11. **How To Clear Trouble**

- Fix indicated problems listed above.

12. **How To Exit From Trouble**

- Once troubles are fixed keypad will return to normal settings.

13. **How To Recognise That The Chime Function Is On**

- Keypad will give a long beep when zone is tripped.
- Zone light will flash while beeping.

14. **How To Turn On Chime**

- Press pre-programmed number for chime. Wait 5 seconds.
- Keypad will give a long beep. Note there is no visible display to show chime active or inactive.

15. **How To Turn Off Chime**

- Press pre-programmed number for chime. Wait 5 seconds.
- Keypad will give a long beep.

16. **How To Send Keypad Panic Alarms**

- Press down [*] + [#] keys together for a PANIC alarm.
- Press down [1] + [3] keys together for a FIRE alarm.

17. How To Reset Smoke Detectors

- Press the [#] key.
- This will drop power to latching smoke detectors.

User Codes

18. How To Add User Codes

- 7 codes are available, master-#1, user codes-#2-7.
- You must know master code to enter other codes.
- To add user code press [*] [code number 2-7] [#], [master code], [*] [code number 2-7] [#], [new user code], [*] [code number 2-7] [#].

19. How To Delete User Codes

- To delete a code press [*] [code number 2-7] [#], [master code], [*] [code number 2-7] [#], [*]-[*]-[*]-[*], [*] [code number 2-7] [#].

20. How To Overwrite User Codes

- To overwrite a code press [*] [code number 2-7] [#], [master code], [*] [code number 2-7] [#], [new code over top of old one] [*] [#].