

IR REMOTE CONTROLLER

IR Remote Controller For 4CH DVR USER MANUAL



Please read the instructions thoroughly before using the product.

OVERVIEW

- * Remotely control DVR and PTZ cameras
- * IR emission distance: straight line is 10m; transmit at left and right 22.5° is 8m
- * Control up to 255 PTZ cameras and DVR
- * Enabling different ID
- * Current consumption: AAA size battery x 2

OPERATION

- 1) (DVR / PTZ):
Press this button to switch the DVR / PTZ camera control mode.
- 2) (Key lock)
Press this button to lock keys on the DVR front panel.
- 3) **ZOOM + / ZOOM -**
Use these buttons to adjust the optical zoom-in ratio of the PTZ camera.
- 4) **Auto**
Press this button to enter the auto pan mode of the PTZ camera.
- 5) (Menu)
In the PTZ camera control mode, press this button to enter the main menu of the PTZ camera.

In the DVR control mode, press this button to enter the main menu of the DVR.
- 6) **Number selection buttons**
Press these numbering selection buttons to select numbers / to select the channel.
- 7) - / +
Press these buttons to change the settings in the menu.
- 8) **Up / Down / Left / Right**
Press one of these direction buttons to move the cursor up/down/left/right.
Press one of these direction buttons to control the movement of the PTZ camera.
- 9) **OK / SET**
Press "OK" button to confirm the selection / enter a submenu mode.

Press "SET" button to swap the position of the DVR channel display.
For example, if you want to swap "01" channel with "04" channel.
→ Move the cursor to the "01" channel and press "SET" button.
→ Use "+" or "-" to select the "04" channel, and press "OK" button.
→ Press (Menu) button to exit the "SET" mode.
- 10) **List**
To quick search the recorded files by event list, press this button to show all types of the event lists.

ALARM: List the information of the alarm-trigger-recorded files.
MANUAL: List the information of the manual-recorded files. The DVR will save one recorded file once any recording setting is changed
MOTION: List the information of the motion-trigger-recorded files.
SYSTEM: List the information of the system-recorded files. The DVR system will save one recorded file every one hour.
TIMER: List the information of the timer-recorded files.
- 11) **Latest**
Press this button to playback the latest recorded video of the DVR.
- 12) (Fast rewind / Pause / Fast forward)
Under the DVR playback mode, press these buttons to fast rewind / pause / fast forward the playback file.
- 13) (Stop)
Press this button to stop playback and return to the live mode of the DVR.
- 14) **CH- (Speaker icon) CH+ (Audio Channel)**
Use these two buttons to select the live or playback sound of the DVR audio channels.
- 15) **R.E.T.R.**
Press this button to activate the Remoter Event Trigger Recording function 3 / 5 / 10 minutes later. For details, please refer to your DVR user's manual.
- 16) (Slow playback)
Press this button to playback the latest recorded video of the DVR.
Press this button once to get 1/4X speed and press twice to get 1/8X speed.
- 17) **Live**
Press this button to stop the playback and return to the live mode of the DVR.
- 18) (Channel display)
Press this button to switch the channel display of the DVR.
- 19) **SEQ. (Sequence)**
Press this button to activate / exit the CALL MONITOR function.
When this function is activated, the DVR will display each channel in sequence.
- 20) (Digital zoom)
Press this button to enlarge the image of the selected DVR channel (2X zoom). And press this button again to exit.