

ADVANTAGE USER INSTRUCTIONS

Checking for Open Zones

(BEFORE ARMING YOUR ALARM SYSTEM, ALL PROTECTED DOORS, WINDOWS AND OTHER PROTECTION ZONES MUST BE CLOSED)

PROCEDURE:

1. Prior to arming, if **NOT READY** is displayed, check for open zones by depressing the **READY** key.
2. All open protection zones will be displayed.
3. **READY** will be displayed when all protection zones have been made intact or corrected.

Arming the System

(LEAVING THE PREMISES WITH NOBODY REMAINING)

PROCEDURE:

1. With **READY** displayed, enter the security code (or "*" if "Quick Arm" is used).
2. Press the **AWAY** key.
3. The **ARMED** indicator will light and **AWAY** will be displayed, accompanied by two beeps. Exit delay begins (a slow beeping will occur throughout the exit delay period, if so programmed by your installer). Perimeter protection is in effect immediately.

Arming the System

(WHILE INSIDE, STAY/HOME)

PROCEDURE:

1. With **READY** displayed, enter the security code (or "*" if "Quick Arm" is used).
2. Press the **STAY** key.
3. **ARMED** indicator will light and **STAY** will be displayed. The console will beep three times. Exit delay begins.

Arming the System

(WHILE INSIDE, EXPECTING A LATE ARRIVAL)

PROCEDURE:

1. With **READY** displayed, enter the security code (or "#" if "Quick Arm" is used).
2. Press the **STAY** key.
3. **ARMED** indicator will light and **STAY** will be displayed. The control will beep three times. Exit delay begins.

RESULT:

- All perimeter protection zones are armed and will sound alarms immediately when violated. (Except those with entry/exit delay, which will sound alarms when the delay period has expired).
- All interior protection zones are disarmed to permit freedom of movement throughout the interior.
- The person arriving later will be able to enter without causing an alarm, but must disarm the system before the entry delay expires.

Arming the System

(WHILE INSIDE, WITH NO EXPECTED LATE ARRIVALS)

PROCEDURE:

1. With **READY** displayed, enter the security code (or "#" if "Quick Arm" is used).
2. Press the **INSTANT** key.
3. **ARMED** indicator will light and **STAY** and **INSTANT** will be displayed. The control will beep three times.

RESULT:

- All interior protection zones are disarmed for freedom of movement throughout the interior.
- All perimeter protection zones, including those with delays are armed (after exit delay) and will **instantly** cause an alarm when violated.

Disarming the System and Silencing the Alarm

(FOR AWAY, STAY, INSTANT, AND MAXIMUM ARMING)

PROCEDURE:

1. Enter **security code + OFF**. Any alarm sounders will be silenced.
2. If an alarm has occurred, note the number displayed and repeat procedure to restore the **READY** display. If **READY** will not display, go to the displayed protection zone and remedy the fault (close windows, etc.). If the fault cannot be remedied notify the alarm company.

NOTE:

- A fire alarm is indicated by a display of both **FIRE** and **ALARM** on the console. These will go out only when the fire zone is again intact.

Ambush

(WHEN FORCED TO DISARM SYSTEM UNDER THREAT)

PROCEDURE:

1. Enter the first three digits of the security code. Increase the final digit by one and then press OFF.

EXAMPLE:

(Normal Security Code) 1 2 3 4 + OFF

(Ambush Security Code) 1 2 3 5 + OFF

Temporary Security Codes

PROCEDURE:

1. Enter master security code.
2. Press CODE + user number (03-22) + the 4 digit temporary security code. The console will beep once when the procedure has been completed successfully.

CAUTIONS:

- Up to twenty separate temporary codes may be assigned.
- Do not assign a temporary code that conflicts with the AMBUSH code.
- To remove a temporary code enter master security code + CODE key + user number (to be deleted) + master security code.
- Users to whom temporary codes have been assigned should not be shown how to bypass protection zones unless they have a need to know.

Bypassing Protection Zones

(USED FOR ARMING SYSTEM WITH ONE OR MORE ZONES SELECTIVELY LEFT UNPROTECTED)

PROCEDURE:

1. System must be disarmed first.
2. Enter security code + BYPASS + zone number(s) (e.g. 01,02,03, etc.)
IMPORTANT! All single digit zone numbers MUST be preceded by a zero (example enter 01 and not 1)
3. Wait for all bypassed protection zones to be sequentially displayed (each accompanied by one beep) before arming.
4. BYPASS will be displayed to indicate the presence of one or more bypassed zones.
5. Arm system.

RESULT:

- All bypassed protection zones will NOT cause an alarm when violated during the armed mode.

Displaying Bypassed Protection Zones

(USED FOR DETERMINING WHAT PROTECTION ZONES HAVE BEEN BYPASSED)

PROCEDURE:

1. If **BYPASS** is displayed, enter **security code + BYPASS**.
2. Wait for all bypassed protection zones to be sequentially displayed (each accompanied by one beep).

RESULT:

- The system must be in the disarmed mode when this display function is performed.

LIMITATIONS:

- The system must first be placed in the disarmed state to perform the bypass procedure.
- **Fire zones CANNOT be bypassed.**
- Arming the system before bypassed zones are displayed nullifies the bypass procedure.

NOTE:

- All bypasses are removed when an **OFF** sequence (**security code plus OFF**) is performed.

Chime Annunciation

(THIS FEATURE IS FUNCTIONAL ONLY WHEN THE BURGLARY SYSTEM IS DISARMED)

PROCEDURE:

1. Enter security code and depress the **CHIME** key.
2. **CHIME** will be displayed.

RESULT:

- When a door in the delay zone is opened, or a perimeter zone is disturbed (e.g. window opened), three tones will be heard at the control.

IMPORTANT:

- The chime mode is turned off by entry of the security code and depression of **CHIME** again.

The **ADVANTAGE** Security System has been proudly installed by: