


# Solution 16i

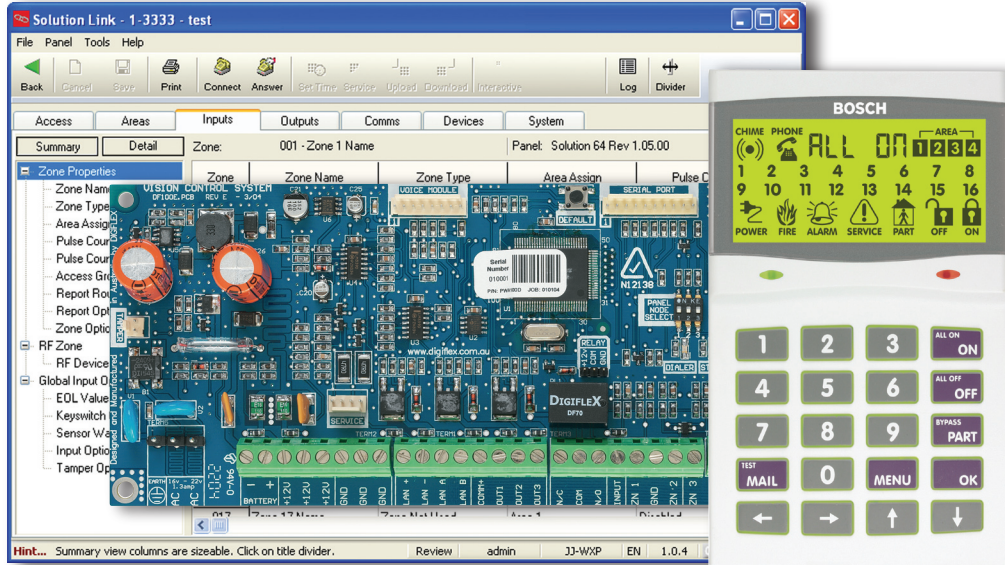

Security Systems

EN

Quick Start Guide  
Security System

# BOSCH

### Copyright Notice

Unless otherwise indicated, this publication is the copyright of Bosch Security Systems Pty Ltd ("Bosch"). All rights are reserved. You may download a single copy of this publication. By downloading the publication you agree that you will: (i) only use the publication for your own reference; (ii) not commercially exploit or charge any person for the use of the publication; and (iii) not modify the publication in any way without the prior written permission of Bosch. Except as specified above or where authorised by the Copyright Act 1968 (Cth), no part of this publication may be reproduced, transmitted, modified or stored in any form or by any means, without the prior written permission of Bosch.

### Trademarks

Throughout this document trademark names may have been used. Rather than put a trademark symbol in every occurrence of a trademark name, we state that we are using the names only in an editorial fashion and to the benefit of the trademark owner with no intention of infringement of the trademark.

### Notice of Liability

While every effort has been taken the accuracy of this document, neither Bosch Security Systems Pty Ltd nor any of its official representatives shall have any liability to any person or entity with respect to any liability, loss or damage caused or alleged to be caused directly or indirectly by the information contained in this book. Should you find any error on inconsistency, please notify us accordingly.

Bosch Security Systems Pty Ltd reserves the right to make changes to features and specifications at any time without prior notification in the interest of ongoing product development and improvement.

### Telepermit Note

The grant of a Telepermit for a device in no way indicates Telecom acceptance of responsibility for the correct operation of that device under all operating conditions.

This equipment shall not be used in any manner that could constitute a nuisance to other Telecom customers.

Immediately disconnect this equipment should it become physically damaged, and arrange for its disposal or repair.

The transmit level from this device is set as a fixed level and because of this there may be circumstances where the performance is less than optimal. Before reporting such occurrences as faults, please check the line with a standard telepermitted telephone.


### Warnings

- 1) This product must be installed and maintained by a qualified and licensed security installer.
- 2) This product may not perform as expected if installed incorrectly.

- 3) Some features of this product require a working telephone line to operate and telephone communication service provider charges are applicable.
- 4) Australian standard AS 2201 requires regular service by qualified and licensed security persons and regular user testing. Please consult your security alarm company for further details.
- 5) Incorrect programming of parameters can result in operation contrary to what may be desired.
- 6) Leave the mains adapter plugged in at all times.
- 7) Leave the telephone line plugged in at all times under normal conditions.
- 8) The Product Identification Label for this product which is supplied in the resistor pack, must be affixed to the outside of the enclosure during installation.



# BOSCH

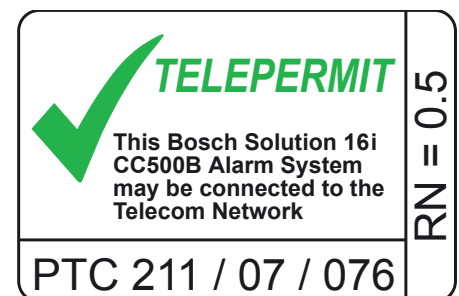

- 9) This equipment shall not be set up to make automatic calls to the Telecom '111' Emergency Service.

**TABLE OF CONTENTS**

|  |           |
|--|-----------|
| Copyright Notice .....                             | 2         |
| Trademarks .....                                   | 2         |
| Notice of Liability .....                          | 2         |
| Telepermit Note .....                              | 2         |
| <b>FEATURES .....</b>                              | <b>4</b>  |
| <b>OVERVIEW .....</b>                              | <b>4</b>  |
| <b>ABOUT THE PANEL .....</b>                       | <b>5</b>  |
| Enclosures .....                                   | 5         |
| Enclosure Fixing Method .....                      | 5         |
| Installing The Tamper Switch .....                 | 5         |
| Enclosure Module Spaces .....                      | 5         |
| Installing Panels and Modules .....                | 6         |
| Connecting Power To The Panel .....                | 8         |
| Connecting The Battery .....                       | 8         |
| A.C. mains Transformer Option .....                | 8         |
| Panel LED Indicators .....                         | 8         |
| <b>WIRING DIAGRAMS .....</b>                       | <b>9</b>  |
| EOL Resistor ColourS and Values .....              | 9         |
| LAN Overview .....                                 | 12        |
| LAN Wiring .....                                   | 12        |
| System Earthing .....                              | 13        |
| Terminating the LAN .....                          | 13        |
| Terminal Descriptions .....                        | 14        |
| Board Connectors .....                             | 14        |
| <b>ABOUT THE KEYPAD .....</b>                      | <b>14</b> |
| Keypad Button Functions .....                      | 14        |
| Keypad Setup .....                                 | 15        |
| Keypad Address Select .....                        | 15        |
| Status Icons / LED's .....                         | 16        |
| Keypad Tones .....                                 | 16        |
| DTMF Control Functions .....                       | 17        |
| Expansion Modules .....                            | 17        |
| Expansion Module Configuration .....               | 18        |
| <b>PROGRAMMING OVERVIEW .....</b>                  | <b>18</b> |
| Entering Programming Mode .....                    | 19        |
| Exiting Programming Mode .....                     | 19        |
| Programming Structure .....                        | 19        |
| Interpreting The Text Display .....                | 19        |
| Programming BIT Options .....                      | 19        |
| Programming Text Locations .....                   | 20        |
| Programming Telephone Numbers .....                | 20        |
| Programming List Options .....                     | 20        |
| Programming The Clock .....                        | 21        |
| <b>GETTING STARTED BACK TO BASE .....</b>          | <b>21</b> |
| <b>SERVICE MODE .....</b>                          | <b>21</b> |
| <b>DEFAULTING THE SYSTEM .....</b>                 | <b>21</b> |
| <b>DOMESTIC TEMPLATE DEFAULTS .....</b>            | <b>22</b> |
| <b>DIRECT LINK PROGRAMMING .....</b>               | <b>22</b> |
| <b>ZONE ARRAY .....</b>                            | <b>22</b> |
| <b>BASIC REPORTING REFERENCE .....</b>             | <b>22</b> |
| <b>PROGRAMMING LOCATIONS REFERENCE TABLE .....</b> | <b>24</b> |
| <b>PROGRAM LOCATIONS .....</b>                     | <b>27</b> |
| Access Programming .....                           | 27        |
| Area Programming .....                             | 28        |
| Input Programming .....                            | 30        |
| Zone Default Table .....                           | 31        |
| Output Default Table .....                         | 32        |
| Output Programming .....                           | 32        |
| One Shot Mode .....                                | 33        |
| Pulsing Mode .....                                 | 33        |
| Output Event Types .....                           | 33        |

|                          |    |
|--------------------------|----|
| Comms Programming .....  | 34 |
| Device Programming ..... | 37 |
| System Programming ..... | 39 |

|                                 |           |
|---------------------------------|-----------|
| <b>TESTING THE SYSTEM .....</b> | <b>41</b> |
| <b>SPECIFICATIONS .....</b>     | <b>42</b> |

**FIGURES**

|   |    |
|---|----|
| Figure 1: PCB and Mounting Clip Installation Diagram .....  | 5  |
| Figure 2: Tamper Bracket Installation .....                 | 5  |
| Figure 3: MW700 - Small Enclosure Details .....             | 6  |
| Figure 4: PCB Mounting Clip .....                           | 6  |
| Figure 5: MW700 Configuration Examples .....                | 6  |
| Figure 6: MW710 - Large Enclosure Details .....             | 7  |
| Figure 7: MW710 Configuration Examples .....                | 7  |
| Figure 8: Internal Transformer Connection Diagram .....     | 8  |
| Figure 9: N/C No EOL Zone .....                             | 9  |
| Figure 10: N/C Single EOL Zone .....                        | 9  |
| Figure 11: N/C Split EOL Zone .....                         | 9  |
| Figure 12: N/C Zone With Tamper .....                       | 9  |
| Figure 13: N/O No EOL Zone .....                            | 9  |
| Figure 14: N/O Single EOL Zone .....                        | 9  |
| Figure 15: N/O Split EOL Zone .....                         | 9  |
| Figure 16: N/O Zone With Tamper .....                       | 9  |
| Figure 17: EOL Resistor Colour Chart .....                  | 9  |
| Figure 18: Solution 16i Board Layout .....                  | 10 |
| Figure 19: Solution 16i Connection Diagram .....            | 11 |
| Figure 20: LAN Connection Using 2 Pair Security Cable ..... | 12 |
| Figure 21: LAN Connection Using Twisted Pair Cable .....    | 13 |
| Figure 20: Keypad Emergency Alarm Trigger's .....           | 15 |
| Figure 22: Keypad DIP Switch Address Settings .....         | 15 |
| Figure 23: LCD Display Showing All ICONs .....              | 16 |
| Figure 24: Text Characters Which Can Be Displayed. ....     | 19 |
| Figure 25: Sample Option Bit Menu Display .....             | 19 |
| Figure 26: Area Text Programming Display .....              | 20 |
| Figure 27: Telephone Number Programming Display .....       | 20 |
| Figure 28: List Option Programming Display .....            | 21 |
| Figure 29: Factory Default Display .....                    | 22 |
| Figure 30: Zone Array Showing Z1 to Z4 .....                | 22 |
| Figure 31: Zone Array Showing Z9 to Z12 .....               | 22 |
| Figure 32: Text Menu Examples .....                         | 23 |
| Figure 33: Character Set .....                              | 43 |

**TABLES**

|  |    |
|--|----|
| Table 1: Expansion Options .....                       | 5  |
| Table 2: Dialler Indicator LED .....                   | 8  |
| Table 3: Status Indicator LED .....                    | 8  |
| Table 4: Terminal Block Descriptions .....             | 12 |
| Table 5: Board Connector Descriptions .....            | 12 |
| Table 6: Keypad Emergency Alarm Trigger's .....        | 13 |
| Table 7: Keypad DIP Switch Address Settings .....      | 13 |
| Table 8: DTMF Remote Control Functions .....           | 15 |
| Table 9: Zone Configuration Using Expanders .....      | 16 |
| Table 10: LAN Module Addressing .....                  | 16 |
| Table 11: Keys Used During Programming .....           | 17 |
| Table 12: Text Keypad Character Set .....              | 18 |
| Table 13: Phone Number Programming .....               | 18 |
| Table 14: Domestic Dialing Defaults Settings .....     | 20 |
| Table 15: Basic Reporting Code Reference Listing ..... | 20 |
| Table 16: Programming Locations and Descriptions ..... | 24 |
| Table 17: User Default Programming Options .....       | 25 |
| Table 18: Zone Types .....                             | 28 |
| Table 19: Zone Defaults .....                          | 29 |
| Table 20: Output Default Table .....                   | 30 |
| Table 22: Output Polarity Types .....                  | 31 |
| Table 21: Output Event Types .....                     | 31 |

## FEATURES

Listed below are the main features of the Solution 16i Control Panel.

- ❖ Individual Box Tamper Circuit Monitoring
- ❖ Report Via Email
- ❖ Telephone Line Busy Tone Detect
- ❖ RAS Intelli-connect® CLI Caller Line Identification
- ❖ Daylight Savings
- ❖ Senior Watch
- ❖ System Maintenance Interval Reminder
- ❖ System Weekly Test Reminder
- ❖ Area Inactivity Interval
- ❖ Temporary Pin Code
- ❖ Dual Reporting
- ❖ Dual Redundant Reporting
- ❖ Alarm Report Abort/cancel Options
- ❖ 8 Programmable Holiday Calendars
- ❖ 8 Programmable Schedules
- ❖ 16 On-board Zones (Exp To 16 Zones)
- ❖ Fire Alarm Verification
- ❖ 48 Pin Codes
- ❖ 4 Supervised High Power Digital Outputs
- ❖ Outputs Expandable to 8 via Relay Module
- ❖ Supervised Siren Driver
- ❖ Partitionable To 4 Areas
- ❖ Dialler Reports SIA, Contact ID, SMS and Email Formats
- ❖ Supervised LAN Keypads (Maximum 8 Keypads)
- ❖ Keyswitch Input
- ❖ 256 History Event Memory
- ❖ EMI / Lightning Transient Protection
- ❖ ICON interface with Text Prompts
- ❖ Programmable Via Solution Link Software
- ❖ Telephone Line Fail Monitor
- ❖ Time Executed Functions
- ❖ 60 Output Event Types
- ❖ Exit Restart
- ❖ Expansion Module Supervision
- ❖ DTMF Remote Control of Areas and Outputs
- ❖ Remote Arming
- ❖ Designed and Manufactured in Australia
- ❖ Three Year Warranty

## OVERVIEW

### Zones

The Solution 16i control panel provides up to 16 separate zones of protection. Zone programming determines the panel's response to open/short and tamper conditions on the zone loop.

### Areas

The control panel supports up to 4 separate areas. You can assign all zones to a single area, or you can assign each zone to a combination of different areas.

You can arm and disarm the control panel by area, alternatively, you can arm and disarm several areas at the same time.

### Dialler

The control panel has a built-in dialler to send reports to the receiving party (ie. Security company monitoring station, mobile phone, SMS etc).

### Keypads

You can connect a maximum of 8 fully supervised keypads to the control panel. Proximity Keypads are also available.

### History Log

The control panel can store up to 256 history events from all 4 areas. All events are stored in the log, even if they are programmed not to report via the on-board dialler.

You can view the control panel's history log via keypad, serial printer (optional), or by connection of a personal computer (direct/remote) using the Solution Link upload/download software.

### Programming

You can program the Solution 16i either by a keypad or using a personal computer using the Solution Link upload/download software.

Solution Link Version V1.10 or higher is required to program this panel.

## ABOUT THE PANEL

### Enclosures


The MW700 - Small Enclosure and MW710 - Large Enclosure have been designed to reduce installation time and improve aesthetics on larger installations where often multiple enclosures need to be located in close proximity to each other.

A number of new features have been incorporated including a new style tamper bracket which can be easily installed before or after the enclosure is mounted to the wall, an anti tamper lid which insures the cabinet tamper triggers when the lid is removed, easier access for flexible and rigid conduits, additional 20mm cable entry knockouts and a new board mounting system using removable spring clips.

The MW700 and MW710 enclosures include numerous holes, allowing the PCB mounting clips to be positioned in the most appropriate location for each installation.



*For ease, it is recommended that the PCB mounting clips are installed from the rear of the enclosure before mounting it to the wall.*

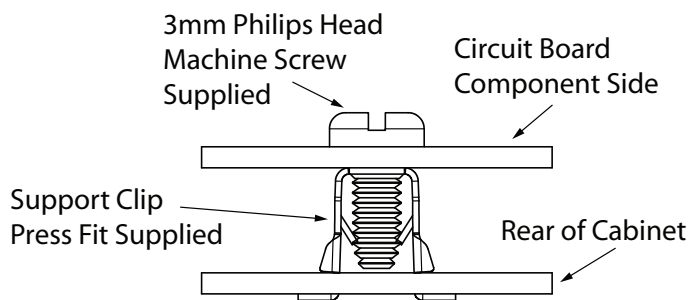

**Figure 1: PCB and Mounting Clip Installation Diagram**

### Enclosure Fixing Method

#### CM700B - Small Enclosure

Use appropriate fasteners capable of handling a minimum of 6kg to fix the cabinet against a sturdy surface using the mounting holes provided.

#### CM710B - Large Cabinet

Use appropriate fasteners capable of handling a minimum of 12kg to fix the cabinet against a sturdy surface using the mounting holes provided.

### Installing The Tamper Switch

The tamper switch can be located on either the left or right hand side of the cabinet to suit the installation. Before installing the bracket, fit the tamper lead to the switch and then insert it into the bracket.

Once the enclosure has been mounted to the wall, insert

the tamper bracket into the rectangular hole in the top flange of the enclosure and then slide the base of the bracket toward the top until the tamper switch locates in the rear of the enclosure.

Depress the tamper a few times with your finger to ensure smooth operation.



**Figure 2: Tamper Bracket Installation**

### Enclosure Module Spaces

The MW700 enclosure has space for 2 large modules or 4 small modules while the optional MW710 enclosure has space for up to 4 large modules or 8 small ones. The enclosures have been designed so that any combination of large and small units can be neatly mounted together on the wall.

Each module is mounted to the enclosure using 4 or more clip in standoffs. The clips can be inserted from the rear of the enclosure before mounting it to the wall, or from the front of the enclosure after it has been mounted. Both methods should be performed using your finger tips to prevent damage to the standoff. (Standoffs and screws are supplied with each module).

All compatible add on modules will mount on these spaces. See below for list if modules which can be added to the ICON panel.

| Module                     | Space Occupied  |
|----------------------------|-----------------|
| Solution 16i Control Panel | 2 Module Spaces |
| CM704B Zone Expander       | 1 Module Space  |
| CM710B Output Expander     | 1 Module Space  |
| CM720B LAN Power Supply    | 1 Module Space  |
| CM195 RF Receiver Expander | 1 Module Space  |

**Table 1: Expansion Options**

Use the above table to help determine which size cabinet you will require for the job.

On some export models, one module space will not be available as the mains transformer mounts in this location.

### Installing Panels and Modules


Once the enclosure is secured in place, install the panels and modules onto the mounting clip using the supplied 3mm screws. Do not over tighten the screws.

When fitting panels or large modules, you should use 5 mounting clips, one in each corner of the PCB and one in the middle of the PCB underneath the main terminal blocks. When mounting small modules, only 4 clips are required, 1 in each corner.

Both enclosures are supplied with tamper switches, tamper leads, tamper brackets and a quantity of mounting clips and screws. If required, additional mounting clips and screws may be purchased in bags of 50 clips (10 packs x 5pcs). (P/N: MW890)



**The supplied mounting clips are designed to use the 3mm machine screws supplied with the enclosure. The use of self tapping screws will damage the clips.**

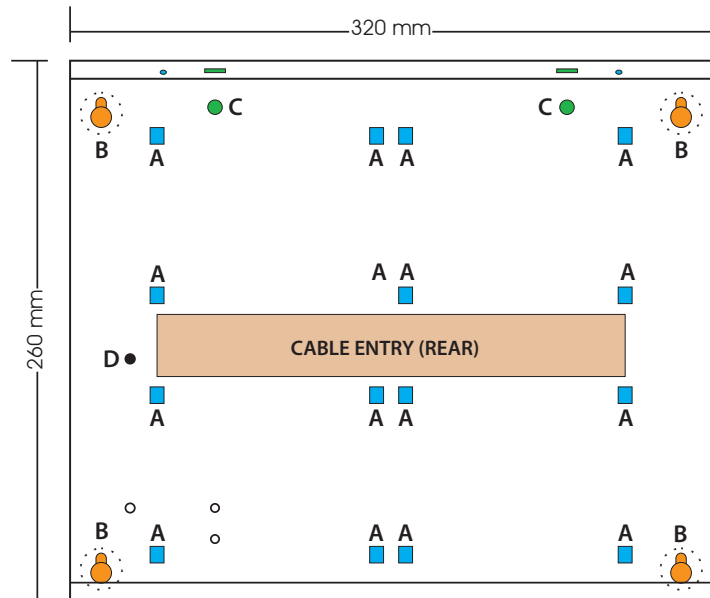

- A = PCB Mounting Clip Holes
- B = Enclosure Mounting Holes
- C = Tamper Bracket Mounting Holes
- D = Earth Stud - 4mm

Figure 3: MW700 - Small Enclosure Details


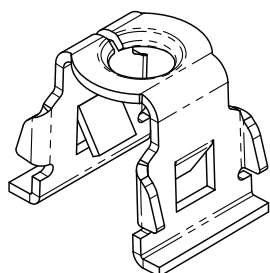


Figure 4: PCB Mounting Clip

The following example shows the MW700 -Small enclosure configured using 4 small modules.

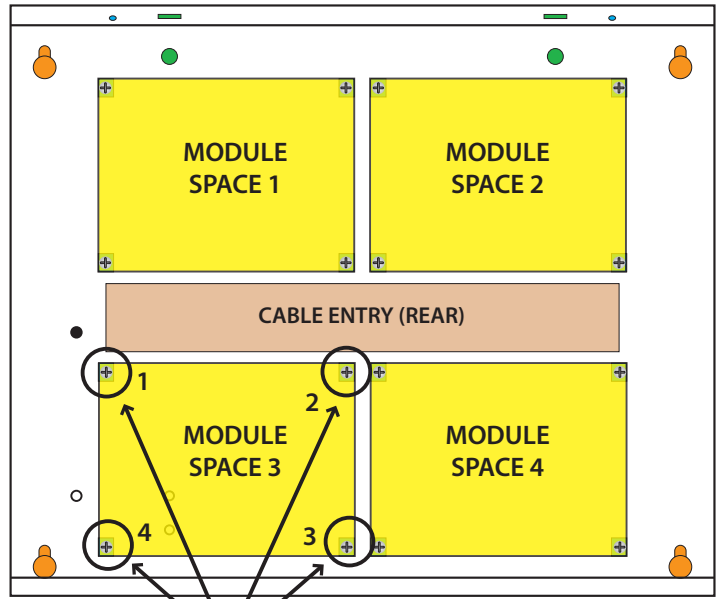

When installing small modules, you should fit 4 mounting clips as shown.

The following example shows the MW700 -Small enclosure configured using 2 small modules and 1 large module.

When installing large modules, you should fit 5 mounting clips as shown. Clip 5 provides support under the main terminal block only. No screw is fitted.

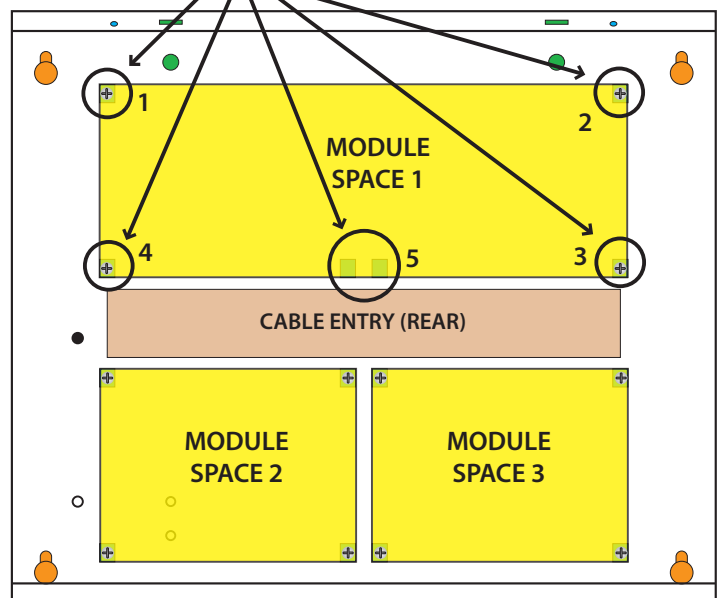


Figure 5: MW700 Configuration Examples


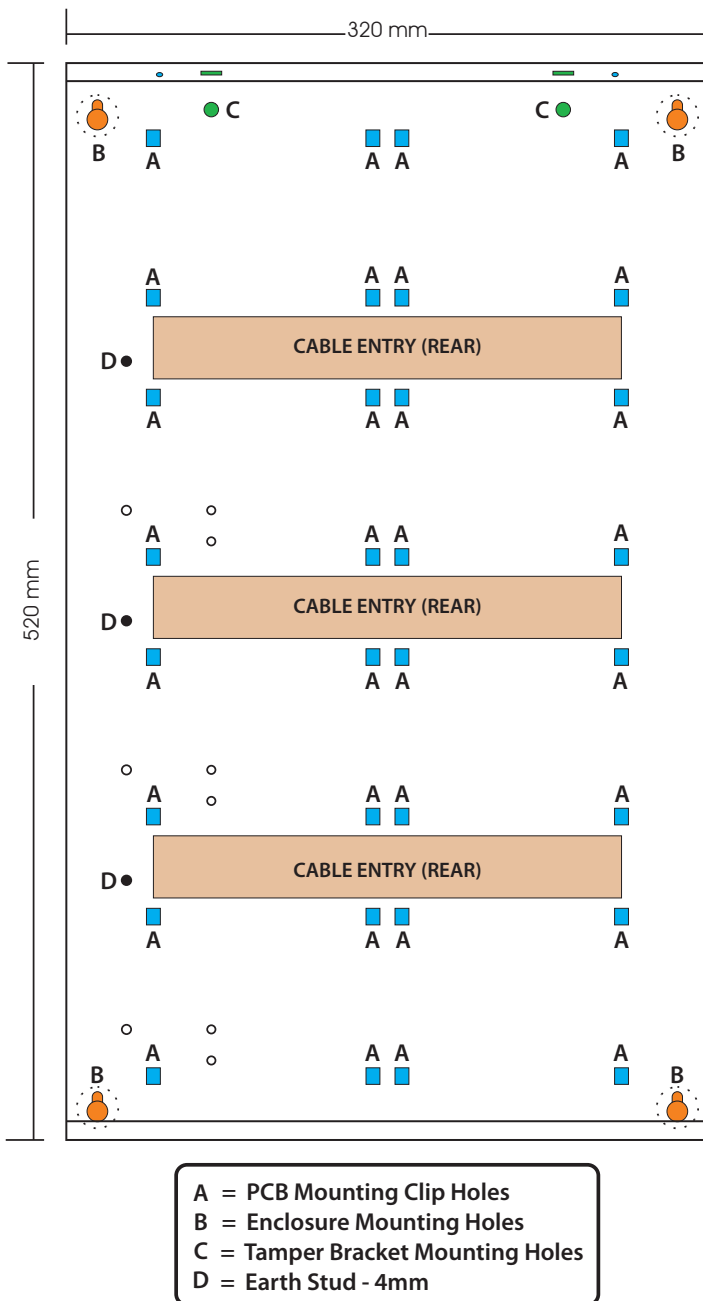


Figure 6: MW710 - Large Enclosure Details

The following examples show the MW710 -Large enclosure configured using 6 small modules and 1 large module.

When installing large modules you should fit 5 mounting clips as shown. Clip 5 provides support under the main terminal block only. No screw is fitted.

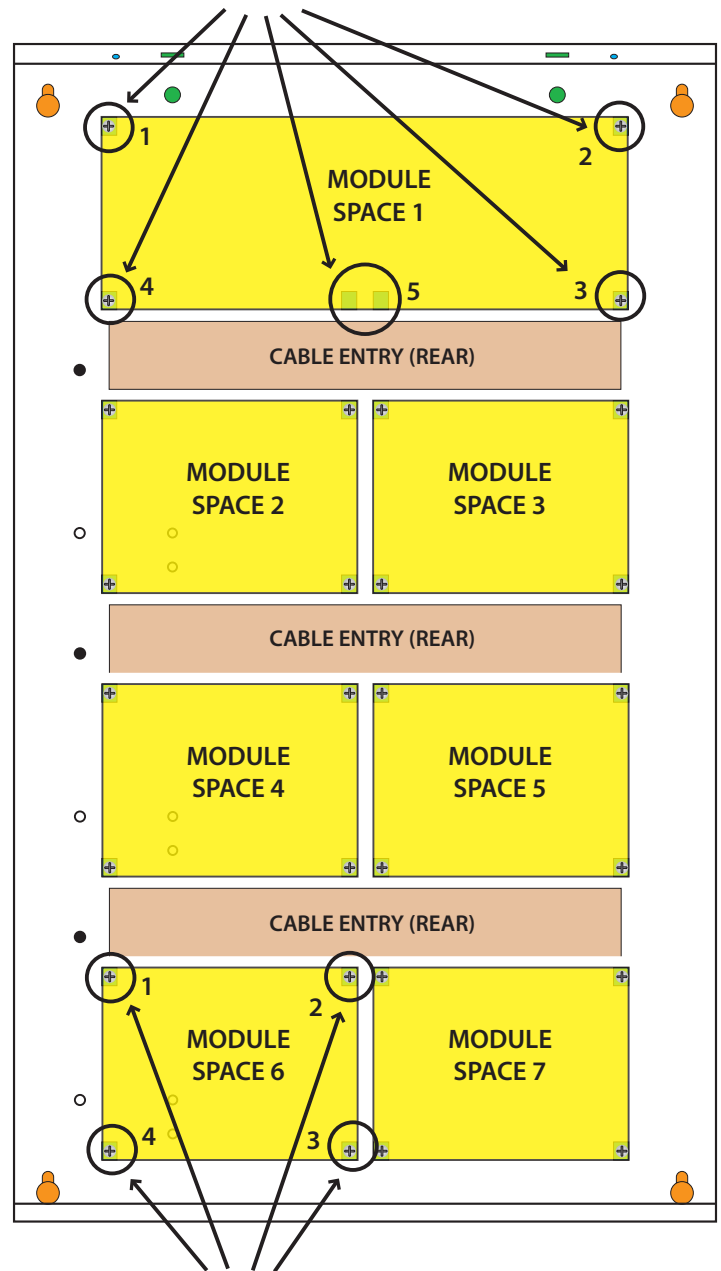

When installing small modules, you should fit 4 mounting clips as shown.

Figure 7: MW710 Configuration Examples

### Connecting Power To The Panel

For normal operation, the panel requires both A.C. and DC power sources. The A.C. source can be provided either by an external adapter or by an internal transformer depending on the model and country of sale.

When connecting using the A.C adapter, feed the cable in to the enclosure and terminate the wires on the removable terminal block supplied before connection it to the PCB.

If using a 3 wire Adaptor, then the earth wire should also be terminated onto the terminal block. Always check the orientation of the terminal block with the PCB markings before connecting it to the PCB.

### Connecting The Battery

The panel is supplied with a set of battery leads to suit the chosen enclosure. Connect the Red Battery lead to the Battery (+) terminal and the Black Battery lead to the Battery (-) terminal on the PCB.

Once terminated onto the PCB connect the other end of the leads to the battery paying attention to the polarity.


### A.C. mains Transformer Option

On models with an internal transformer, a suitable mains power cord must be installed between the transformer and the A.C Mains supply. See Figure 8 below. This must be completed by a suitably qualified electrician according to the applicable wiring standards and regulations.



**For permanently connected equipment, a readily accessible disconnect device such as an A.C. Mains power outlet or mains switch shall be installed in a location near the equipment, for connection of the mains power cord.**

Next connect the transformer output wires (red) to the removable terminal block supplied and then connect it to the PCB. Always check the orientation of the terminal block with the PCB markings before connecting.

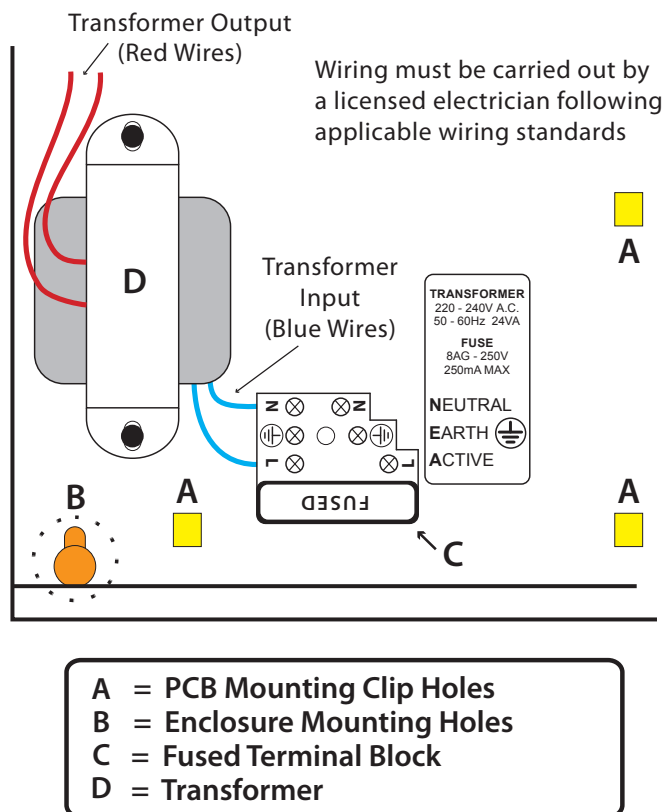

- A = PCB Mounting Clip Holes
- B = Enclosure Mounting Holes
- C = Fused Terminal Block
- D = Transformer

Figure 8: Internal Transformer Connection Diagram

### Panel LED Indicators

The Solution 16i PCB has two LED indicators (Dialler and Status LED's) which display the following information.

| Condition | Meaning                     |
|-----------|-----------------------------|
| Off       | Offline                     |
| On        | On Line (Dialling/Answered) |
| Flashing  | Incoming Call               |

Table 2: Dialler Indicator LED

| Condition                  | Meaning               |
|----------------------------|-----------------------|
| Off                        | Error                 |
| On                         | Error                 |
| Flash Once Every 2 Seconds | OK                    |
| Flash Fast                 | AC or Battery Trouble |

Table 3: Status Indicator LED



**During factory defaulting the Status and Dialler LED indicators will flash alternatively for approximately 15 seconds.**



**WIRING DIAGRAMS**



Figure 9: N/C No EOL Zone

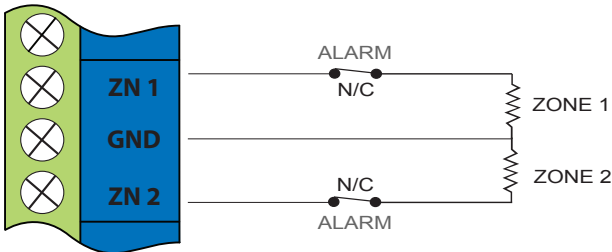


Figure 10: N/C Single EOL Zone

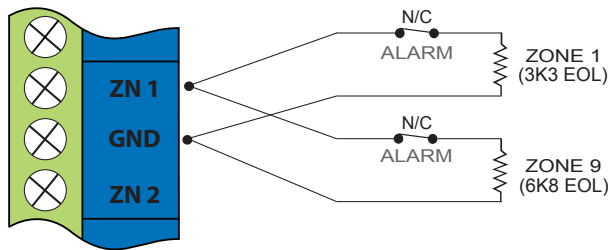


Figure 11: N/C Split EOL Zone

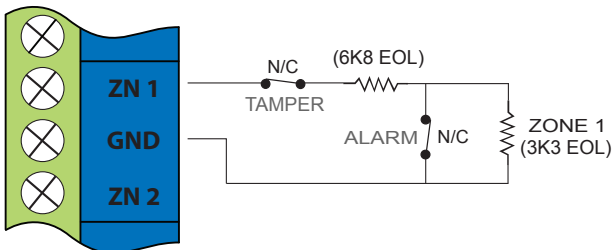


Figure 12: N/C Zone With Tamper



The Above diagrams display zone configurations using Normally-Closed Alarm contacts and Normally-Open Alarm Contacts. When using Normally-Open Alarm Contacts you must select Inverted Seal for each zone in MENU 3-1-8. A shorted loop is a tamper condition for all EOL zone configurations.



Figure 13: N/O No EOL Zone

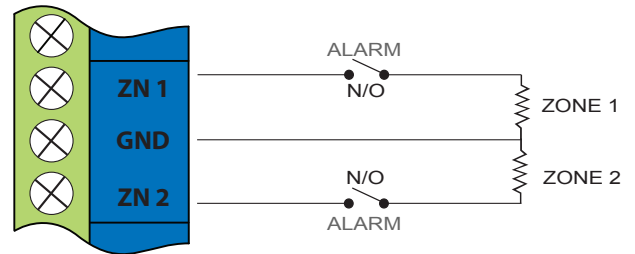


Figure 14: N/O Single EOL Zone



Figure 15: N/O Split EOL Zone

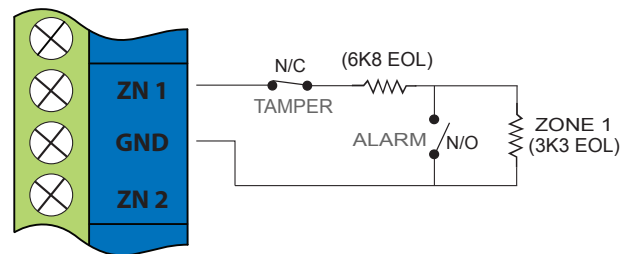


Figure 16: N/O Zone With Tamper

**EOL Resistor ColourS and Values**

Use either the 4 colour, or solid colour resistors supplied.

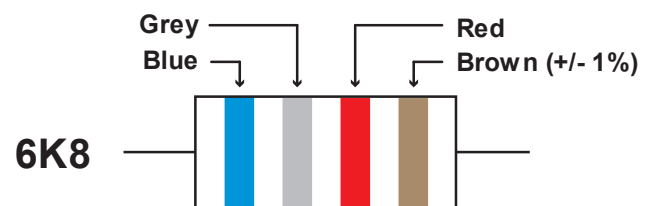
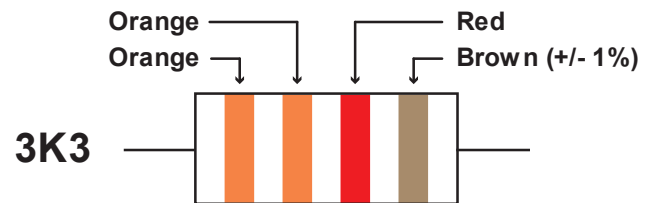


Figure 17: EOL Resistor Colour Chart

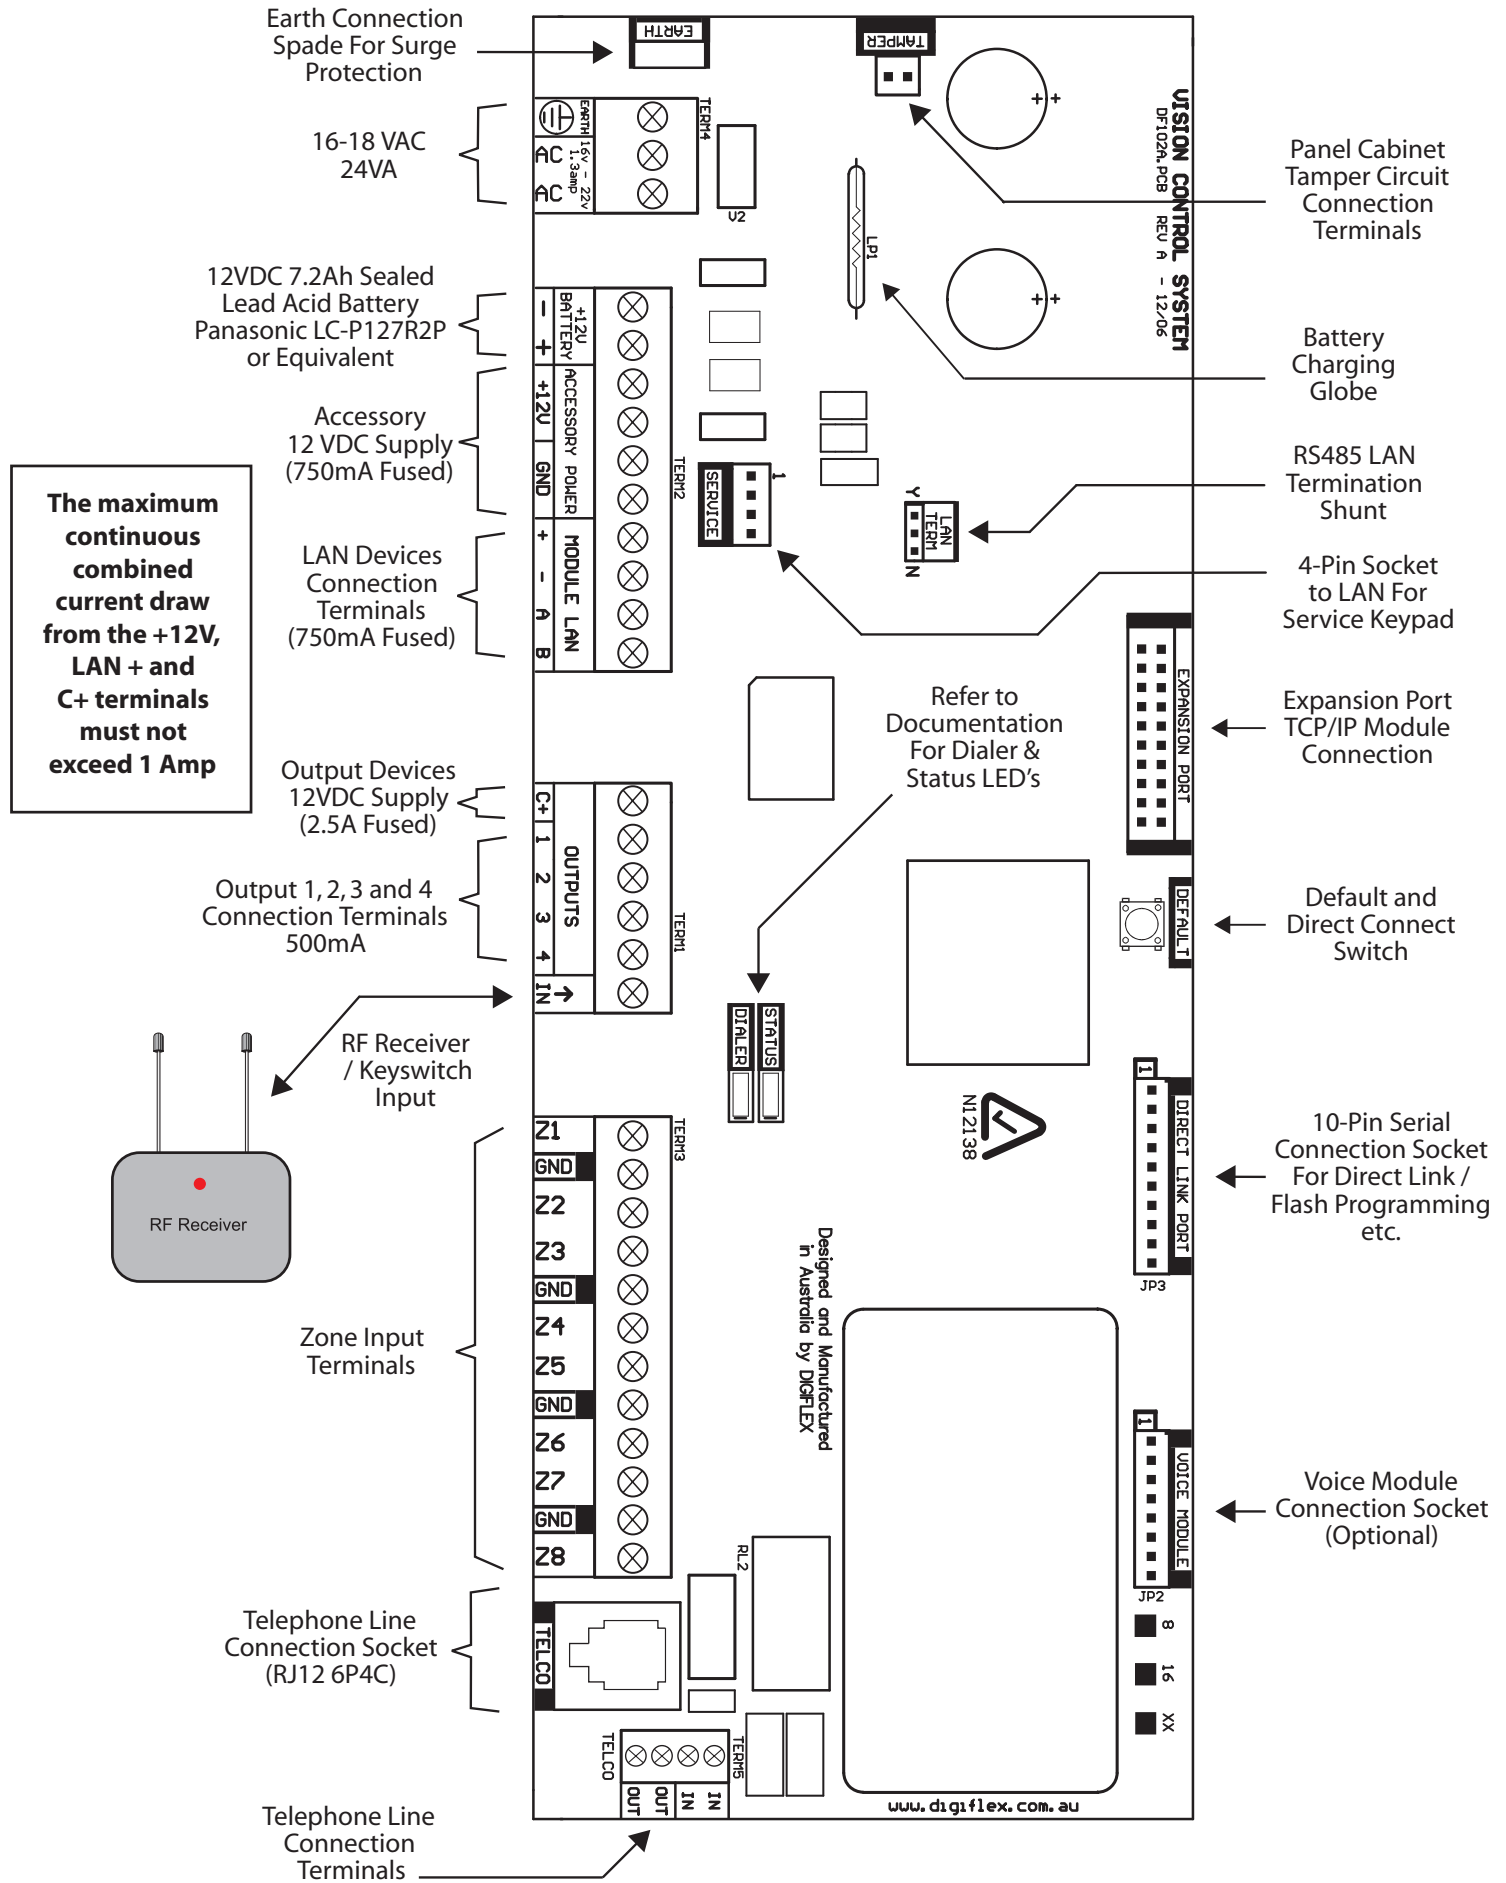


Figure 18: Solution 16i Board Layout

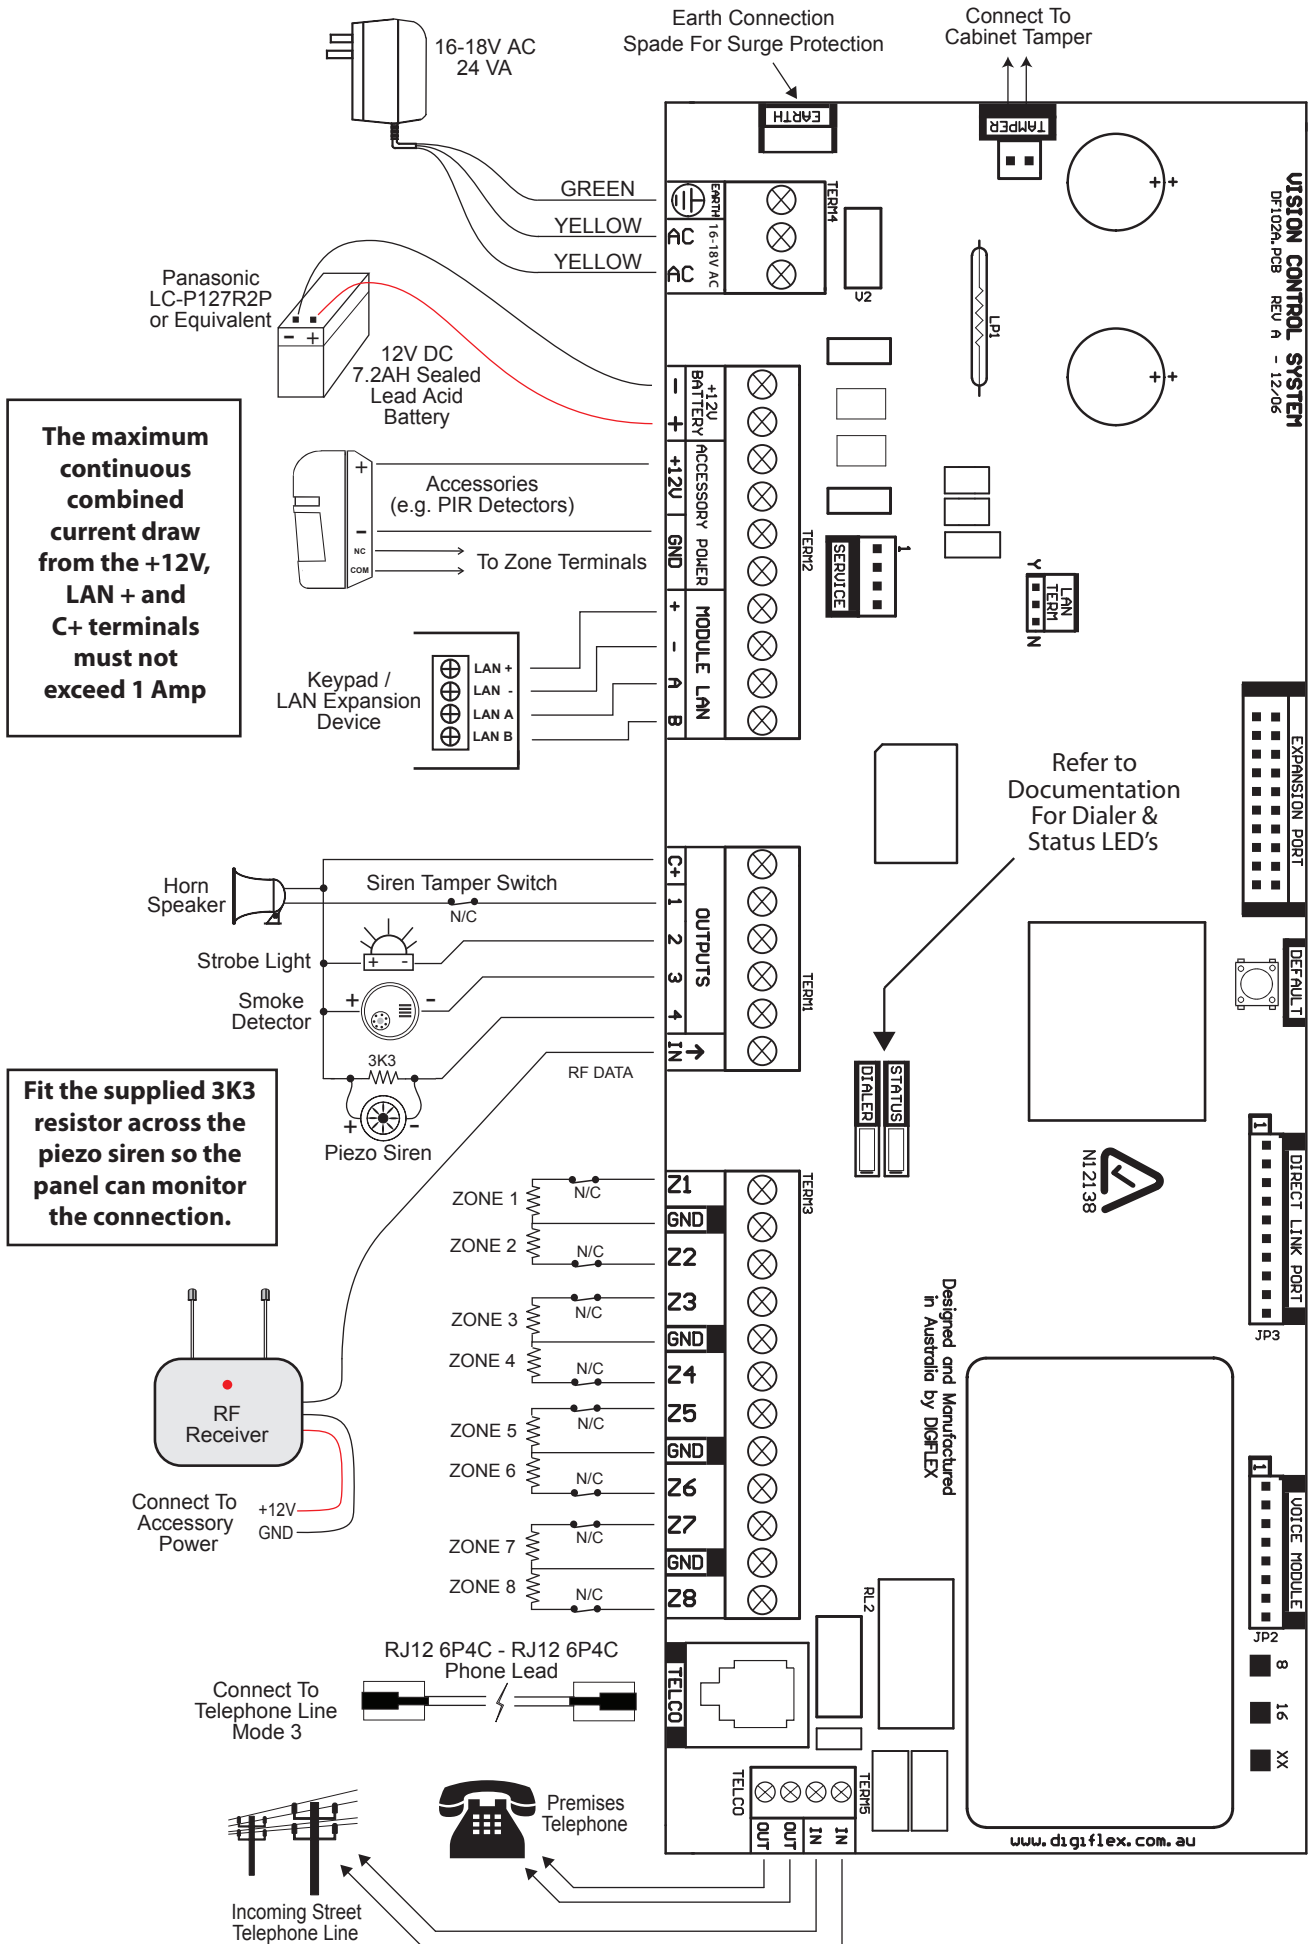


Figure 19: Solution 16i Connection Diagram

### LAN Overview

The Solution 16i panel communicates with other system module devices via the built in RS485 LAN or Local Area Network.

For increased security, the system uses anti-substitution technology and a proprietary data encryption algorithm to communicate with all LAN modules.

When using the recommended cable types the LAN can be up to 1500metres in length, or even greater when LAN isolators are used.

See the CM397 LAN Isolation Module reference guide for more information on how to use LAN isolators to increase the overall LAN length, improve surge immunity protection and prevent earth loops.



*It is recommended that one or more CM379 Isolators be used when connecting the LAN between multiple buildings.*

### LAN Wiring

Figure 20: and Figure 21: show the two recommended module connection diagrams.

The method shown in Figure 20, is only recommended for use where the total LAN length is 300metres or less and the system is not installed in a electrically noisy environment. In this case it is possible to use 7/0.20 or 14/0.20 security cable (non twisted) provided that module voltage levels are maintained within specification.


The method shown in Figure 21, offers the greatest immunity to noise interference and voltage surges. This connection method is recommended where the total LAN length is greater than 300metres. When using twisted pair cable the LAN length can be up to 1500metres, and this can be extended even further when using LAN isolators.

The LAN can be wired using the daisy chain method as shown, where each module is wired back to the panel on the same cable run or using a star configuration, where individual modules are wired back to the panel on individual wires.

Un-shielded cable can be used successfully in many situations however for the highest reliability and performance in areas prone to frequent electrical storms or high levels of electrical interference, shielded twisted pair cable should be used.

LAN+ and LAN- should not be used to power detectors or other external devices. These devices should be powered from the +12V terminals on the panel or via an external power supply.

When wiring modules with built in power supplies like the control panel and the CM720B Power Supply, do NOT connect the EARTH wire from any 3 wire plug pack to the module's EARTH input terminal, if you have installed a separate communication earth wire.

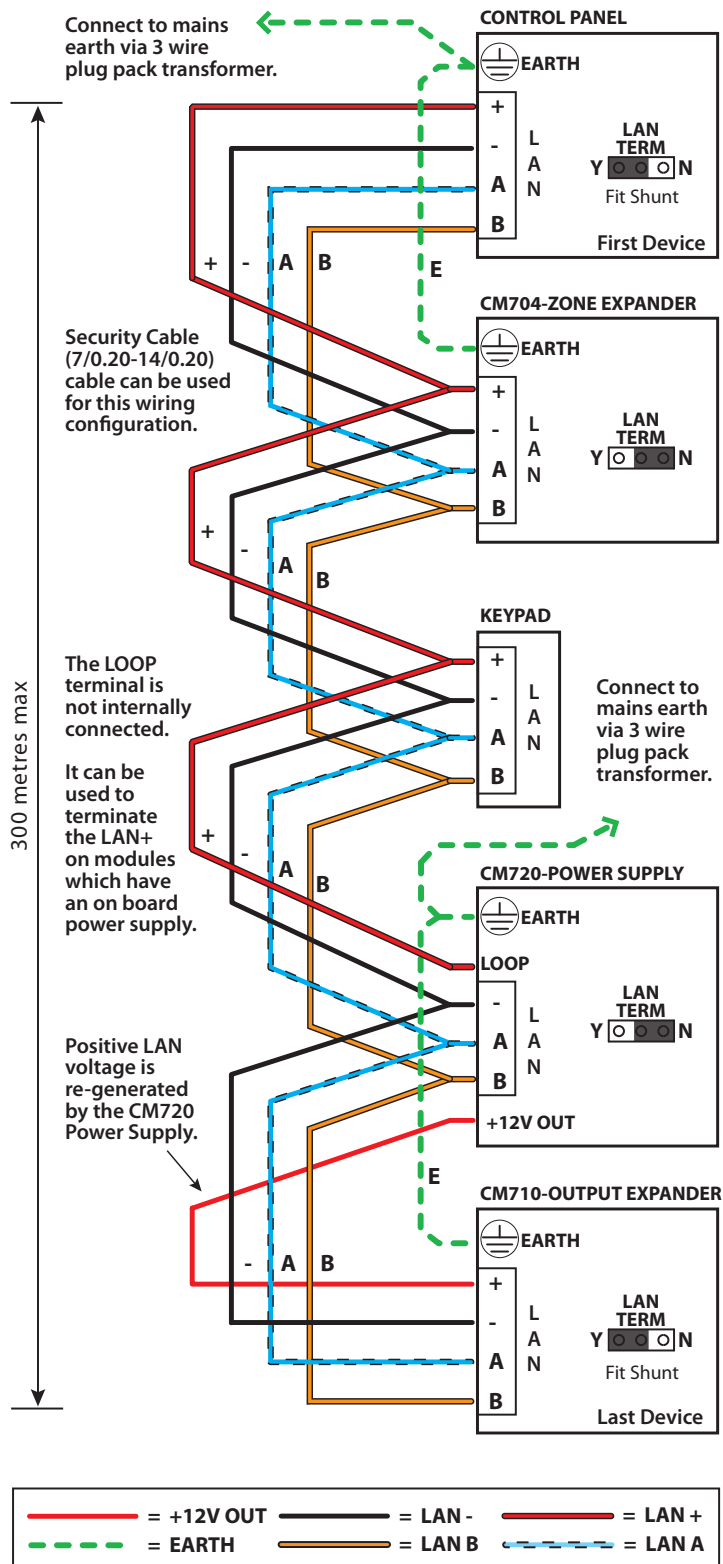

**Figure 20: LAN Connection Using 2 Pair Security Cable Recommended for LAN Lengths 300 metres or less.**

The LAN A and LAN B wires are not interchangeable. Make sure that the LAN A wires from all modules connect to LAN A on the panel and LAN B wires from all modules connect to LAN B on the panel.

Do not connect the positives of two power supply sources together. When wiring the LAN to modules that are self powered, or powered from an external source you should terminate the LAN+ into the terminal marked LOOP. This terminal is simply a termination point and is not internally connected.

### System Earthing

When running a CET communications Earth as per Figure 21, the communication earth should be connected to the earth terminal on each module and then connected back through the CET to the main building earth conductor.

Do NOT connect the plug pack transformers earth wire to any modules earth terminal.

**Note** *If a separate Communications Earth wire is installed, Do NOT connect the EARTH wire from any 3 wire plug pack to any modules EARTH input terminal.*

If a separate communications earth is NOT being used, then you should connect the earth wire from the 3 wire plug pack to the panels earth terminal as shown in Figure 20.

When using shielded cable, the shield of each length of cable should only be connected to a protective earth at one end. Do not allow the shield to make contact with negative 0 volts, ground or any other wiring within the system.

All earth wiring should be carried out in accordance with the local wiring regulations in your area.

### Terminating the LAN

For reliable operation the system LAN must be terminated correctly. The control panel and all LAN modules include a LAN TERM pin header and shunt which is used to connect the termination resistor on the module.

When the shunt is installed between the Y pin and the centre pin, the terminator is fitted and when the shunt is between the N pin and the centre pin the terminator is not fitted.


Where all modules are connected to the panel on a single cable run, (Daisy Chained) the terminators should be installed on the first and last modules on the LAN.

If the modules are connected to the panel via multiple cables all running back to the control panel (Star Configuration) then the terminators should be installed on the modules at the end of the two longest cable runs.

There are no LAN terminators on keypads. If a keypad is one of the two furthest devices from the control panel then a 470 ohm 1/2watt resistor can be fitted at the keypad between the LAN A and LAN B terminals.

In smaller installations where no LAN modules have been installed there is no need to fit the termination resistor on the control panel.

**Note** *The LAN must be terminated correctly for proper operation.*

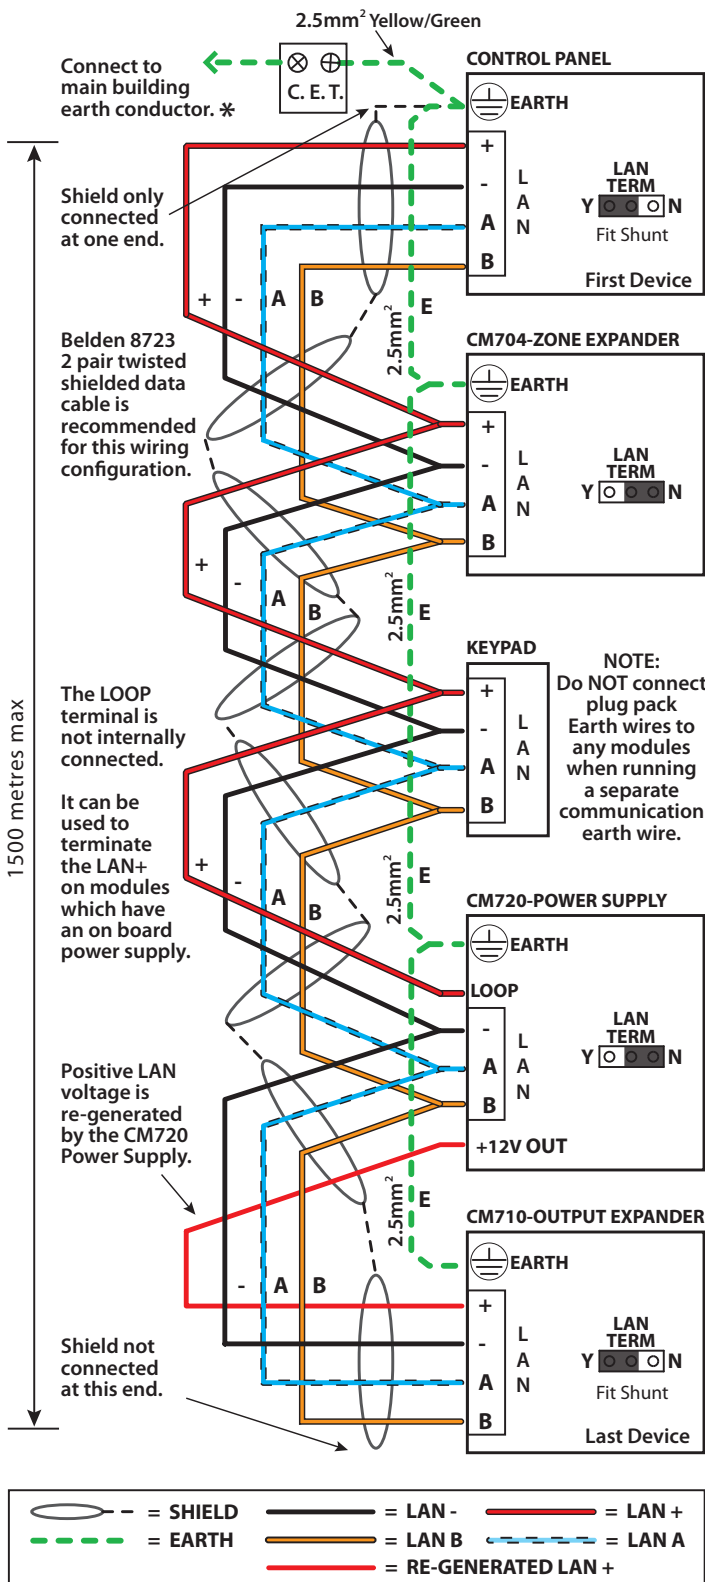

**Figure 21: LAN Connection Using Twisted Pair Cable Recommended for LAN Lengths greater than 300 metres.**

The LAN- terminals from all modules must be connected together for correct operation.

### Terminal Descriptions

| N° | Name    | Description   |
|----|---------|---|
| 1  | Earth   | Earth wire from this terminal is connected to the Mains earth.  |
| 2  | ~ (AC)  | Connection of the 16-18V A.C. 50-60 Hz adapter or internal transformer.   |
| 3  | ~ (AC)  |   |
| 4  | BAT (-) | Negative and positive connections to the stand-by battery. 12 VDC / 7.2AH   |
| 5  | BAT (+) |   |
| 6  | +12 V   | These terminals are used to power detectors and other accessory devices. (750mA Fused)  |
| 7  | +12 V   |   |
| 8  | GND     |   |
| 9  | GND     |   |
| 10 | LAN +   | These terminals are used to power LAN modules and devices. (750 mA Fused)   |
| 11 | LAN -   |   |
| 12 | LAN A   | Connect the LAN A data terminal of any LAN device (eg. Keypads, expansion boards) to this terminal. The control panel supports up to 300 m of 24/0.20 (18 AWG) wire on these terminals. |
| 13 | LAN B   | Connect the LAN B data terminal of any LAN device (eg. Keypads, expansion boards) to this terminal. The control panel supports up to 300 m of 24/0.20 (18 AWG) wire on these terminals. |
| 14 | COMM+   | Common positive terminal for system outputs. This terminal is 2.5A PTC Fuse protected.  |
| 15 | OUT 1   | Fully supervised programmable, open collector outputs capable of driving (sink) loads up to 1 amp for sirens, strobes etc.  |
| 16 | OUT 2   |   |
| 17 | OUT 3   |   |
| 18 | OUT 4   |   |
| 19 | INPUT   | Programmable Input for RF Receivers, Keyswitch and other devices.   |
| 20 | ZN 1    | Zone 1 and 9 sensor loop input (+).   |
| 21 | GND     | Common (-) for Zone 1 & 2 sensor loop.  |
| 22 | ZN 2    | Zone 2 and 10 sensor loop input (+).  |
| 23 | ZN 3    | Zone 3 and 11 sensor loop input (+).  |
| 24 | GND     | Common (-) for Zone 3 & 4 sensor loop.  |
| 25 | ZN 4    | Zone 4 and 12 sensor loop input (+).  |
| 26 | ZN 5    | Zone 5 and 13 sensor loop input (+).  |
| 27 | GND     | Common (-) for Zone 5 & 6 sensor loop.  |
| 28 | ZN 6    | Zone 6 and 14 sensor loop input (+).  |
| 29 | ZN 7    | Zone 7 and 15 sensor loop input (+).  |
| 30 | GND     | Common (-) for Zone 7 & 8 sensor loop.  |
| 31 | ZN 8    | Zone 8 and 16 sensor loop input (+).  |
| 32 | IN      | These terminals are used to connect the telephone line from the street.   |
| 33 | IN      |   |
| 34 | OUT     | These terminals are used to connect the premises telephones.  |
| 35 | OUT     |   |

Table 4: Terminal Block Descriptions



The maximum combined continuous current draw from the +12V, LAN + and COMM+ terminals must not exceed 1 Amp

### Board Connectors

| Connector               | Description  |
|-------------------------|--|
| <b>Service</b>          | This socket allow you to connect a service Keypad to the panel during installation.  |
| <b>Tamper</b>           | This socket is used to connect the cabinet tamper switch to the panel.   |
| <b>Default</b>          | This push button is used to reset the control panel back to factory default and to enable Direct Link Programming Mode.          |
| <b>Voice Module</b>     | This is used to connect the optional Voice Command Module (CM100).   |
| <b>Direct Link Port</b> | This socket is used to connect the Direct Link Interface (P/N CM900) or the Flash Programmer Interface (P/N CM901) to the panel. |
| <b>Telco</b>            | This is a RJ12 6P/4C connector that allows you to connect the control panel to the PSTN telephone line.                          |
| <b>Expansion Port</b>   | Used to connect addition modules to the control panel. eg TCP/IP interface.  |
| <b>LAN Term</b>         | Used to terminate the RS485 LAN.   |

Table 5: Board Connector Descriptions

### ABOUT THE KEYPAD

The ICON Keypad has 20 keys or buttons. The buttons allow you to input instructions and navigate the menu screens as required. Some buttons have a secondary function which is activated by holding them down for two seconds. Each button's function is described below.

### Keypad Button Functions

| Key | Description   |
|-----|---|
|     | The numeric keys allow you to enter numbers when required.  |
|     | Use the [MENU] and the numeric keys to enter commands. The [MENU] key is also used to go back one level when navigating through menus or to exit a programming location without saving changes. |
|     | The [ON] key allows you to turn an area or output on. To turn all areas on at the same time when the system has been partitioned, press and hold the [ON] key for two seconds.                  |
|     | The [PART] key allows you to turn an area Part On. This key can also be used to bypass a zone or multiple zones when you press and hold for two seconds.  |

| Key | Description  |
|-----|--|
|     | The [OFF] key allows you to turn an area or output off. To turn all areas off at the same time when the system had been partitioned, press and hold the [OFF] key for two seconds.   |
|     | The [OK] key allows you to enter or select options as well as saving changes.  |
|     | The [MAIL] key allows you to read stored mail. This key can also be used to initiate a dialler test when you press and hold for two seconds.   |
|     | The [←] key allows you to move the cursor left when programming text or telephone numbers.   |
|     | The [→] key allows you to move the cursor right when programming text or telephone numbers.  |
|     | The [↑] key allows you to navigate through menus or to toggle characters when programming telephone numbers.   |
|     | The [↓] key allows you to navigate through menus or to toggle characters when programming telephone numbers. Pressing The [↓] key will display current trouble conditions when the area that the keypad is displaying is disarmed. |
|     | Pressing the [→] and [↑] keys together and holding them down for 2 seconds will trigger a Panic alarm. If programmed the sirens will sound and the monitoring station will be notified.  |
|     | Pressing the [←] and [→] keys together and holding them down for 2 seconds will cause trigger a Fire alarm. If programmed the sirens will sound and the monitoring station will be notified.                                       |
|     | Pressing the [↑] and [↓] keys together and holding them down for 2 seconds will trigger a Medical alarm. If programmed the sirens will sound and the monitoring station will be notified.  |

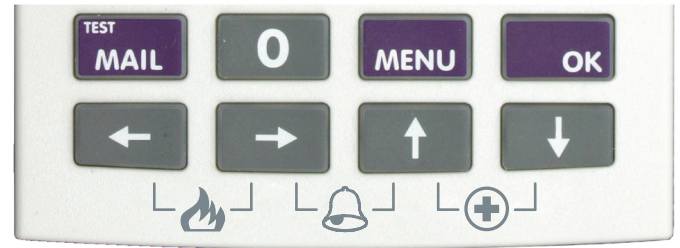


Figure 20: Keypad Emergency Alarm Trigger's

### Keypad Setup

The Solution 16i control panel can have a maximum of 8 keypads connected via the LAN terminals. Each keypad must be set to a unique address before they will operate.

Each keypad needs to be assigned to a home area via MENU 6-1-3. This sets the area the keypad will display and control by default. Keypads can be locked to a home area or allowed to roam or move between areas.

When the system is powered up, any keypads which have not been assigned a home area will be automatically set to home area 1.

Set each keypad address using the table below as a guide.

**Note** Only 1 Keypad can be assigned to each address. All Keypads are supplied from the factory set to address 1. (OFF-OFF-OFF).

### Keypad Address Select

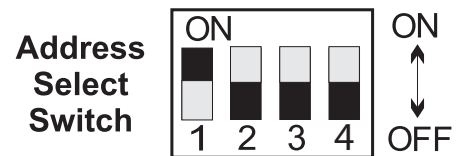


Figure 22: Keypad DIP Switch Address Settings

| Keypad DIP Switch Address Settings |     |     |     |     |
|------------------------------------|-----|-----|-----|-----|
| Keypad To Address                  | S1  | S2  | S3  | S4  |
| Keypad 1                           | Off | Off | Off | Off |
| Keypad 2                           | On  | Off | Off | Off |
| Keypad 3                           | Off | On  | Off | Off |
| Keypad 4                           | On  | On  | Off | Off |
| Keypad 5                           | Off | Off | On  | Off |
| Keypad 6                           | On  | Off | On  | Off |
| Keypad 7                           | Off | On  | On  | Off |
| Keypad 8                           | On  | On  | On  | Off |

Table 7: Keypad DIP Switch Address Settings

| KEYPAD EMERGENCY ALARM TRIGGER'S |                    |                      |
|----------------------------------|--------------------|----------------------|
| Key Sequence                     |                    | Event Triggered      |
|                                  | Hold for 2 seconds | Keypad Fire Alarm    |
|                                  | Hold for 2 seconds | Keypad Panic Alarm   |
|                                  | Hold for 2 seconds | Keypad Medical Alarm |

Table 6: Keypad Emergency Alarm Trigger's

**Status Icons / LED's**

The following table lists the function of each of the ICON Symbols and LED Indicators on the ICON Keypad Display.

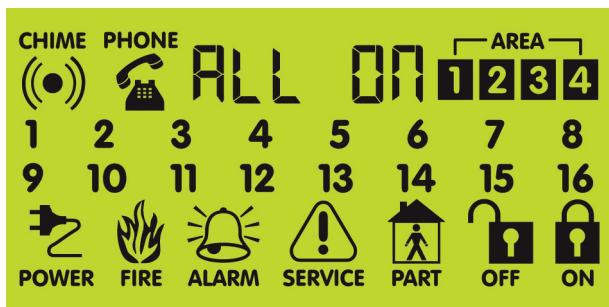


Figure 23: LCD Display Showing All ICONS

| Icon | Status  | Meaning   |
|------|---|---|
|      | The keypad can display which areas (1 – 4) are turned on or off via the Area Icon Indicators. This programmable option can be disabled in MENU 6-1-4. |   |
|      | On  | Area is turned All On or Part On  |
|      | Off   | Area is turned Off  |
|      | Flashing Fast   | Alarm occurred in the area  |
|      | On  | System power is normal  |
|      | Flashing  | System power is missing   |
|      | Flashing  | A fire alarm is active  |
|      | Off   | No fire alarm   |
|      | On  | Fire alarm in memory (Turn the area All On and Off to Clear).             |
|      | On  | The existing service or trouble condition has been acknowledged.          |
|      | Off   | No service or trouble conditions exist                                    |
|      | Flashing  | A service or trouble condition is present that has not been acknowledged. |
|      | On  | The area is turned Part On.   |
|      | Off   | The area is not turned Part On.   |
|      | On  | The area is turned Off  |
|      | Off   | The area is turned All On or Part On                                      |
|      | On  | The area is turned All On   |
|      | Off   | The area is turned Off  |

|   |          |                                       |
|---|----------|---------------------------------------|
|   | On       | Chime Mode is On                      |
|   | Off      | Chime Mode is Off                     |
|   | On       | Phone Line in Use                     |
|   | Off      | Phone Line not in use                 |
| Red LED   | On       | System Armed                          |
|   | Flashing | Alarm                                 |
| Green LED   | On       | System Disarmed                       |
|   | Flashing | Area not ready to turn on             |
| Red & Green LED   | Flashing | Installer programming mode is active. |
| 1 2<br>3 4<br>5 6<br>7 8<br>9 10<br>11 12<br>13 14<br>15 16 | On       | Zone Open or Unsealed                 |
|   | Off      | Zone Closed or Sealed                 |
| 11 12<br>13 14<br>15 16                                     | Flashing | Zone in Alarm or Alarm Memory         |

**Keypad Tones**

All keypads emit several distinct tones and display text to alert you to system events. The volume of the keypad tones can be adjusted in MENU 6-1-0.

| Type                       | Meaning   |
|----------------------------|---|
| <b>Fire Alarm Tone</b>     | When a fire zone sounds an alarm, the keypad will sound 3 seconds on and 2 seconds off (repeat).  |
| <b>Burglary Alarm Tone</b> | When a burglary zone activates while your system is turned on, your keypad emits a continuous siren tone. It sounds for the time set by your security company.  |
| <b>Trouble Tone</b>        | When a system component is not functioning properly, your keypad sounds 4 fast short beeps followed by a 5 second pause (repeat).   |
| <b>Key Press Tone</b>      | Pressing any key on the keypad sounds one short beep, indicating that the key press is accepted.  |
| <b>Entry Delay Tone</b>    | When you enter the premises through a zone programmed for entry delay, the keypad sound a Hi/Low tone to remind you to turn off the area. If the area is not turned off before the entry delay expires, an alarm condition will sound and a report may be sent to your alarm company. |



| Type                   | Meaning  |
|------------------------|--|
| <b>Exit Delay Tone</b> | After you turn an area All On, the keypad will sound 1 short beep every second. During the last 10 seconds fast short beeps will be heard. If you don't exit before the delay time expires and an exit delay door is faulted, an alarm occurs. |
| <b>Error Tone</b>      | If you press an incorrect key, the keypad will sound a 2 second tone.  |
| <b>Menu Mode</b>       | The keypad will sound a Hi / Lo tone to indicate you have entered MENU Mode and a Lo/Hi tone to indicate you have exited MENU mode.  |
| <b>Chime Tone</b>      | The keypad sounds fast short beeps to alert you when a zone programmed for chime is faulted or unsealed.   |

### DTMF Control Functions

Firmware version V1.10 onwards includes comprehensive DTMF control of individual areas and outputs with full user PIN and TIMER GROUP access verification.

Unlike other systems, no additional hardware or modules are required for DTMF control. To configure the desired functions see MENU 5-3-5 DTMF Options.

#### How to Use DTMF Control

1. Once the panel answers the incoming call, if either option 1, 2, 3 or 4 in MENU 5-3-5 is enabled, then the panel will play a short welcome jingle. You now have approximately 5 seconds to enter a valid PIN and log onto the panel.

2. Enter PIN followed by the # key. If the PIN is valid the system will respond with two short beeps. If the PIN is invalid then a single long beep will be heard.

If a valid PIN is not entered in time, the panel will attempt to establish a modem connection as if connecting to the Solution Link software.

If this happens you will need to hang up for approximately 60 seconds before trying again.

3. Once validated, the following commands can be performed. See the table below. If no keys are pressed for 20 seconds then the panel will play the exit jingle before terminating the session and hanging up. Pressing ## at any time while connected will cause the panel to terminate the session.

| DTMF CONTROL FUNCTIONS |  |                |
|------------------------|--|----------------|
| Operation              | Command  | Response       |
| Quick Arm All Areas    | $\boxed{0} + \boxed{\#}$   | 2 x Beeps      |
| Log In OK              | $\boxed{U} \boxed{S} \boxed{E} \boxed{R} \boxed{P} \boxed{I} \boxed{N} + \boxed{\#}$ | Welcome Jingle |
| Log In Failed          | $\boxed{U} \boxed{S} \boxed{E} \boxed{R} \boxed{P} \boxed{I} \boxed{N} + \boxed{\#}$ | Long Beep      |

|                 |  |                        |
|-----------------|--|------------------------|
| Turn Area ON    | $\boxed{1} + (\text{Area N}^\circ 1-4) + \boxed{1} + \boxed{\#}$   | 2 x Beeps (Low - High) |
| Turn Area OFF   | $\boxed{1} + (\text{Area N}^\circ 1-4) + \boxed{2} + \boxed{\#}$   | 2 x Beeps (High - Low) |
| Turn Output ON  | $\boxed{2} + (\text{Output N}^\circ 1-8) + \boxed{1} + \boxed{\#}$ | 2 x Beeps (Low - High) |
| Turn Output OFF | $\boxed{2} + (\text{Output N}^\circ 1-8) + \boxed{2} + \boxed{\#}$ | 2 x Beeps (High - Low) |
| End Session     | $\boxed{\#} + \boxed{\#}$  | Exit Jingle            |

Table 8: DTMF Remote Control Functions

#### DTMF EXAMPLES

Each example below shows the log on step for clarity. In practise is only necessary to log on once per DTMF control session.

To turn Area 1 ON enter the following

$$\boxed{2} + \boxed{5} + \boxed{8} + \boxed{0} + \boxed{\#} = \text{Log ON}$$

$$\boxed{1} + \boxed{1} + \boxed{1} + \boxed{\#} = \text{Arm Area 1}$$

To turn Output 10 ON enter the following

$$\boxed{2} + \boxed{5} + \boxed{8} + \boxed{0} + \boxed{\#} = \text{Log ON}$$

$$\boxed{2} + \boxed{10} + \boxed{1} + \boxed{\#} = \text{Turn Output 10 ON}$$

To turn Output 12 OFF enter the following

$$\boxed{2} + \boxed{5} + \boxed{8} + \boxed{0} + \boxed{\#} = \text{Log ON}$$

$$\boxed{2} + \boxed{7} + \boxed{2} + \boxed{\#} = \text{Turn Output 7 OFF}$$



*If the DTMF Quick Arm option is enabled then it is possible to remotely arm all areas without logging onto the panel.*

*Simply enter 0 + # following the welcome jingle.*

*Make sure that the phone being used to remotely control the panel is set to transmit DTMF tones when keys are pressed during the call. This option is disabled by default on some phones.*

### Expansion Modules

#### CM704B Zone Expander Module

The Solution 16i panel includes support for 1 x CM704B - 8/16 Zone Expansion module. This allows for 16 individual zones when using Alarm and Tamper (4 state) monitoring as well as allowing zones to be located in two separate locations within a building.

All zones follow the global EOL setting in MENU 3-4-0 regardless of whether they are on the panel or on the expander module.

Zone numbering is automatically assigned by the panel during power up depending on the module configuration found and the EOL value selected.



**When using the CM704B you should not select Split EOL monitoring. If you do the zones on the expander will not be available.**

For example single EOL is selected and 1 x CM704B Zone Expander is fitted, then Zones 1 - 8 will be located on the main panel and Zones 9 - 16 will be located on CM704B.

Fitting an RF receiver to the panel allows any zone to be programmed as a wireless zone.

| ZONE CONFIGURATION TABLE |            |                |           |            |
|--------------------------|------------|----------------|-----------|------------|
| Device Type              | Single EOL | Alarm + Tamper | Split EOL | RF Zones   |
| Solution 16i Panel       | 8          | 8              | 16        | Up to      |
| CM704B Expander          | 8          | 8              | N/A       | 16 zones   |
| <b>Total Zones</b>       | <b>16</b>  | <b>16</b>      | <b>16</b> | <b>Max</b> |

**Table 9: Zone Configuration Using Expanders**

Once a zone has been programmed to be a wireless type the corresponding hardwired zone input is automatically disabled. No EOL resistor is required.



**Currently the panel supports only supports CM704B zone expanders. The CM705 is not supported.**

### CM710B Output Expander Module

The Solution 16i panel includes support for 1 x CM710B 4 Way Relay Output Expander.

Adding a CM710B adds an additional 4 relay outputs to the panel. The maximum output capacity is 8. The output expander can be located with the control panel or in separate part of the building and then wired back to the control panel via the 4 wire LAN to minimise cable requirements.

### CM720B Power Supply Module

The Solution 16i panel includes support for 1 x CM720B - 1 Amp LAN Power Supply Module which can be used to provide LAN voltage regeneration as well as supplying power to other modules, Intrusion Sensors Door Strikes etc.

The CM720B module can be located with the control panel or in separate part of the building and then wired back to the control panel via the 4 wire LAN to minimise cable requirements.

The CM720B module is designed to run off a standard plug pack transformer and includes a built in battery charger suitable for charging 12V 7Ah batteries.

As with all LAN modules, the status of the CM720B is constantly being monitored and reported to the control panel via the system LAN.

### CM195 Multi RF Receiver Interface

The CM195 Multi Channel Radio Interface allows up to three RF receivers to be simultaneously connected to the control panel. This can be used to provide greater in building radio

coverage on large or RF unfriendly installations.

Large factories, houses or multi level installations where RF sensors are required, can benefit by having multiple receivers located throughout the building as they can provide you the best possible coverage and a level of redundancy when more than one receiver's coverage area overlaps another.

The CM195 intelligently analyses all signals passed to it by each receiver before sending the appropriate signal to the control panel for processing. Duplicated transmissions sent by more than one RF receiver are filtered to prevent multiple signals being triggered for the same event.

### **Expansion Module Configuration**

LAN module support for the Solution 16i panel requires that each module type is set to address 1. For example if a system has 1 x CM704B and 1 x CM720B installed, they should both be addressed as 'module 1'.

The panel will only look for new devices following a power cycle and only if the LAN is not secured. To add new devices, make sure the LAN is unsecured before powering the system down.

Set the module Address DIP switches accordingly and complete wiring as per instructions. Once complete re-power the system. To interrogate devices connected to the LAN you can use LAN Status command, MENU-6-0-0

| LAN MODULE ADDRESSING  |      |      |      |         |
|--|------|------|------|---------|
| Module   | SW 1 | SW 2 | SW 3 | Address |
| CM704B   | OFF  | OFF  | OFF  | 1       |
| CM720B   | OFF  | OFF  | OFF  | 1       |
| CM710B   | OFF  | OFF  | OFF  | 1       |
| <b>Each different module type should be configured to address 1.</b> |      |      |      |         |

**Table 10: LAN Module Addressing**

### **PROGRAMMING OVERVIEW**

The Solution 16i Control System incorporates a ICON style user interface and includes a text display to show all programming data in an easy to read format. Once programming mode is entered you will see a number of menu options in the display and these may vary depending in the user authority level.

All user and master code user options include brief text prompts to simplify operation and reduce the need to refer to the manual.

Installer programming options are accessed using location numbers with text prompts showing the current location number and the data currently programmed.

### Entering Programming Mode

To enter installer program mode enter, PIN + [MENU].

**The default Installer PIN is 1234.  
The default Master Code PIN is 2580.**

The Red and Green LED indicators on the keypad will flash to confirm Installer programming mode is active.



**All areas must be disarmed with no active alarms. To disarm all areas enter the Installer PIN and hold the [OFF] Key for 2 seconds.**

### Exiting Programming Mode

Press and hold down [MENU] key for 2 seconds.



**You can also select End from the menu and press [OK] to exit.**

### Programming Structure

The ICON system utilises a mixture of text menus and location numbers to simplify programming for both end users and installers.

All programming options can be accessed by entering the appropriate location or menu number followed by the [OK] key, however only a limited number of text menus are provided. As the installer you have access to both programming methods.

Most end user functions can be accessed via the text menu which simplifies operation and reduces training time.

- 1) Enter Program Mode. [1234 + MENU]
- 2) Enter the desired location number to program and press [OK]. Follow the prompts.
- 3) Alternatively, press [MENU] and use the arrow and OK keys to navigate through the text menus.
- 4) At any time you are free to enter the location you wish to move to followed by the [OK] key.
- 5) To exit programming navigate to the end option and press [OK], alternatively hold the [MENU] key down for 2 seconds.

| Key    | Description  |
|--------|--|
| ←      | Scrolls Cursor Left  |
| →      | Scrolls Cursor Right   |
| ↑      | Scrolls Cursor Up  |
| ↓      | Scrolls Cursor Down  |
| OK     | Enter Menu Options or Saves Changes                                  |
| MENU   | Go Back One Level, Hold Down to Exit Programming Mode, Abort Changes |
| 0 to 9 | Enter Data Value, Toggle Bit Option                                  |
| ON     | Turn On Functions, Accept Data                                       |
| OFF    | Turn Off Functions, Clear to End of Line                             |

**Table 11: Keys Used During Programming**

### Interpreting The Text Display

The ICON keypad text display includes space for up to 6 characters to be displayed at one time. To simplify programming, some text menus have been abbreviated.

The following table list the upper case, numbers and some of the special characters which can be displayed on the keypad. See the Character Set Table at the end of this document for a complete character listing.

|       |       |       |       |
|-------|-------|-------|-------|
| A = A | N = N | + = + | 0 = 0 |
| B = b | O = O | , = , | 1 = 1 |
| C = C | P = P | - = - | 2 = 2 |
| D = d | Q = Q | + = + | 3 = 3 |
| E = E | R = R | - = - | 4 = 4 |
| F = F | S = S | [ = [ | 5 = 5 |
| G = G | T = T | ] = ] | 6 = 6 |
| H = H | U = U | SP =  | 7 = 7 |
| I = I | V = V | # = # | 8 = 8 |
| J = J | W = W | = = = | 9 = 9 |
| K = K | X = X | @ = @ |       |
| L = L | Y = Y | * = * |       |
| M = M | Z = Z | / = / |       |

**Figure 24: Text Characters Which Can Be Displayed.**

### Programming BIT Options

The ICON system includes a number programming locations which are known as option bit locations. Each of these has up to 8 different parameters which can be selected.


To program BIT locations, enter the location number followed by the [OK] key. The system will then display the currently selected options in that location.

The numbers 1 to 8 are used to represent the option's state. For example if the number is ON then the corresponding option is enabled, if the number is OFF then the option is disabled.

To toggle the option state, simply press the number on the keypad corresponding to the option.

When finished press the [OK] key to save any changes.

You should refer to the IRG or Installation manual for detailed explanation of the various options.

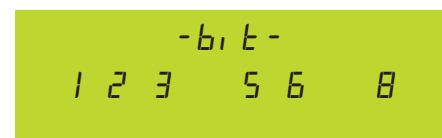

**Figure 25: Sample Option Bit Menu Display**

To abort programming changes, press the [MENU] key.

### Programming Text Locations

Text descriptions are available for Area Name, Zone Name, User Name, Schedule Name, Holiday Name Prox Reader Name and Output Name. Each name can have a maximum of 16 characters.

These names are not displayed on the keypad, however they are used when reporting in SIA+ , SMS or Web reporting formats. They are also stored in the history log and can be uploaded and downloaded to the panel using the RAS software.

The system includes default text for all locations.



Figure 26: Area Text Programming Display

When programming text, each numeric key represents a different group of characters.

Pressing the same numeric key repeatedly will step you through the available characters assigned to the key. The text key layout is the same as most phones. Refer to the table below for detailed character information.

| Key | Characters Assigned To Each Numeric Key   |   |   |   |   |   |   |   |   |  |
|-----|---|---|---|---|---|---|---|---|---|--|
| 1   | .   | , | ? | ! | - | & | ` | 1 |   |  |
| 2   | A   | B | C | a | b | c | 2 |   |   |  |
| 3   | D   | E | F | d | e | f | 3 |   |   |  |
| 4   | G   | H | I | g | h | i | 4 |   |   |  |
| 5   | J   | K | L | j | k | l | 5 |   |   |  |
| 6   | M   | N | O | m | n | o | 6 |   |   |  |
| 7   | P   | Q | R | S | p | q | r | s | 7 |  |
| 8   | T   | U | V | t | u | v | 8 |   |   |  |
| 9   | W   | X | Y | Z | w | x | y | z | 9 |  |
| 0   | SPACE                                     | 0 |   |   |   |   |   |   |   |  |
| ↑   | Scroll Up through entire character list   |   |   |   |   |   |   |   |   |  |
| ↓   | Scroll Down through entire character list |   |   |   |   |   |   |   |   |  |
| ←   | Move to left one character position       |   |   |   |   |   |   |   |   |  |
| →   | Move to right one character position      |   |   |   |   |   |   |   |   |  |
| OFF | Clear from cursor position to end of line |   |   |   |   |   |   |   |   |  |

Table 12: Text Keypad Character Set

Once the desired character is displayed press the right arrow key to move to the next character position.

To save programming changes, press [OK], else press [MENU] to exit without saving. If the text string is longer than can fit on the keypad then you can use the [←] and [→] to scroll left and right. Pressing the off key will clear the rest of the line from the current cursor position.

Programming Example - Change Zone 3 Name

- 1) Enter Program Mode.  
[1234 + MENU]
- 2) Select the text location to program, Zone Name for example,  
[MENU 3-1-0] + [OK]

- 3) When prompted and the zone number [Zn = ] 3 + [OK]
- 4) The system will display the current text. The current cursor position is indicated by the flashing character. To move the cursor, use the left and right arrow keys.
- 5) Enter the required text and then press [OK] to save when finished.



The following additional special characters are available by scrolling using the up and down arrow keys. + - @ # \$ " & % \* : ( ) / < > =

### Programming Telephone Numbers

To program, select primary telephone number under [MENU] 5-1-1 then enter the digits of the telephone number and press the [OK] key to save. Use the up and down arrow keys to program special characters (\*, # and Pause).

If the number is longer than can fit on the keypad display then you can use the [←] and [→] to scroll left and right to view the entire number. It is also possible to edit a single digit of the number by moving the cursor to the location with the [←] and [→] keys.

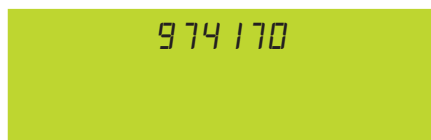


Figure 27: Telephone Number Programming Display

| Key    | Characters Assigned To Each Numeric Key                                    |
|--------|--|
| 0 to 9 | Enter the Digits 0 to 9  |
| ↑ ↓    | Scroll Up through entire character list 0 - 9 • # , comma = 2 second pause |
| ← →    | Move to left or right one character position                               |
| OFF    | Clear from cursor position to end of line                                  |

Table 13: Phone Number Programming


To save programming changes, press [OK], else press [MENU] to exit without saving.

### Programming List Options

Enter the location (Menu) number to be programmed followed by the [OK] key.

When prompted enter the number of the Zone, User, Area, Output or Keypad to program then press the [OK] key.

Enter the required data and then press the [OK] key to finish. Press [MENU] at any time to exit without saving.

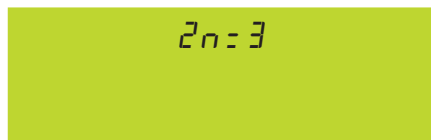



The display will flash prompting you to enter the required data value.

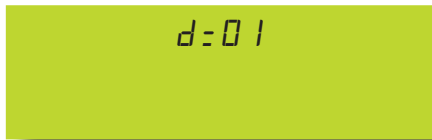



Figure 28: List Option Programming Display

### Programming The Clock


Clock programming requires the following information to be entered, dd mm yy hh mm. To accept the currently programmed data for any field, simply press the [→] to move to the next field.

Enter location 7-1-0 followed by the [OK] key. The keypad will display the currently programmed day of the month.


To change, enter the new day of the month. The system will automatically move to the month field.

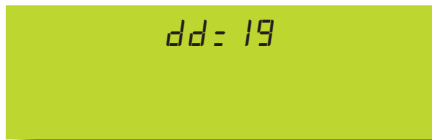

To change, enter the new month of the year. The system will automatically move to the year field.

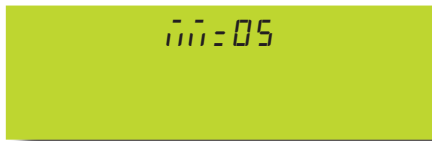

To change, enter the new year. The system will automatically move to the hour field.

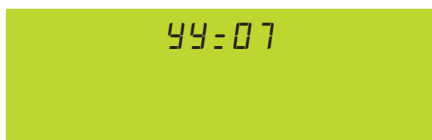

To change, enter the hour of the day in 24hr format. The system will automatically move to the minute field.

To change, enter the minute of the hour followed by the [OK] key to exit.



Pressing OK on any field will accept all currently programmed date and time values. Time is programmed in 24 hr format.

### GETTING STARTED BACK TO BASE

The following steps are the minimum requirements to get the system reporting back to base. Examples assume the panel is disarmed with no alarms and starting from factory default settings.

- 1) Enter Program mode.  
[1234 + MENU]
- 2) Set Time and Date.  
[MENU 7-1-0]


- 3) Change Default Installer PIN.  
[MENU 1-5-2]
- 4) Change Default Master Code PIN.  
[MENU 1-1-1]
- 5) Enter Account (client) Number, Area 1.  
[MENU 2-2-0]
- 6) Enter Base Primary Telephone Number.  
[MENU 5-1-1]
- 7) Enter Base Secondary Telephone Number.  
[MENU 5-1-2]
- 8) Hold Down MENU Key To Exit.

### SERVICE MODE

Service mode when activated disables dialler reporting, prevents all alarms and prevents all users from arming the system.

#### To Turn Service Mode ON

- 1) Enter Program Mode.  
[1234 + MENU]
- 2) Enter,  
[MENU 7-0-8]
- 3) The display will show IS OFF if service mode is off or IS ON if service mode is on.
- 4) Press the On or OFF key to change the service mode state then press [OK] to exit.

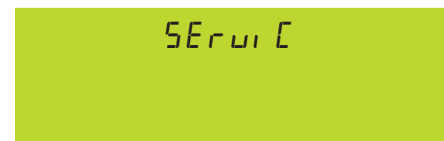

Keypads will display SERVIC on the screen when service mode is active.

### DEFAULTING THE SYSTEM

Defaulting the system will reset all programming options back to the factory default setting. All programming information will be erased.

#### To Hardware Default

- 1) Remove All Power To The System. AC and Battery.
- 2) Press and Hold The Default Push Button Down Then Apply Power To The System.
- 3) Release Button, The Panel Will Reset And Revert To Normal Operation When Default Is Complete.

#### To Software Default

- 1) Enter Program Mode.  
[1234 +MENU]
- 2) Select Factory Default Option.  
[MENU 7-0-4]

- The Panel Will Reset And Revert To Normal Operation When Defaulting Is Complete.



Figure 29: Factory Default Display



You can disable factory defaulting using MENU 7-7-4. If factory defaulting has been disabled you must know the installer code to perform a factory default otherwise the system will need to be returned to your supplier for defaulting or you can purchase a CM255 Default Unlock Key which will unlock the panel in the field. Charges apply for defaulting if returned to the distributor.

### DOMESTIC TEMPLATE DEFAULTS

The following table list the changes that will occur when you select domestic default.

| Program Option          | Domestic Default Value |
|-------------------------|------------------------|
| All Trouble Reports     | Disabled               |
| All Bypass Reports      | Disabled               |
| All Restore Reports     | Disabled               |
|                         |                        |
| Destination 1 TX Format | Domestic Reporting     |
|                         |                        |
| Open / Close Reports    | Disabled (all areas)   |
|                         |                        |
| System Events Route     | Log Only               |

Table 14: Domestic Dialing Defaults Settings

### DIRECT LINK PROGRAMMING

The panel can be programmed via the Solution Link Upload/Download software in either Direct Link or Remote Link modes. For Direct Link you will need a CM900 Direct Link module which connects the panels serial port to the PC.

Once the cable is connected you will need to hold down the default switch on the panel for 5 seconds to initiate the programming session. See Figure 12: for the default switch location. It is also possible to initiate the programming session via [MENU 5-0-5] Start Direct Link.

Solution Link V1.10 or higher is required to program this panel.

### ZONE ARRAY

The feature allows you to view the condition or status of all zones on the panel in groups of 4 zones at a time. Use the [↑] and [↓] keys to change the group of zones to display.

The starting zone for each group is displayed at the beginning of the screen so you will always know which zones you are viewing.

Use Keys [↑] and [↓] to scroll up and down the zone bank Press [OK] or [MENU] when finished.

- N= NORMAL
- S = SHORTED
- A= ALARM
- T= TAMPER
- = DISABLED

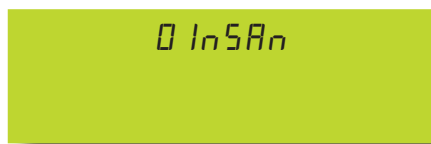


Figure 30: Zone Array Showing Z1 to Z4

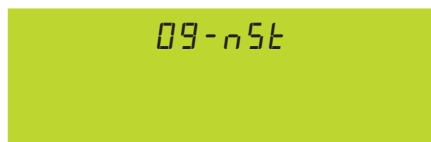


Figure 31: Zone Array Showing Z9 to Z12

In the above example screens,

- N = Zone 01, 04 and 10 are Normal (Sealed)
- S = Zone 02 is Shorted
- A = Zone 03 is in Alarm (Unsealed)
- T = Zone 12 is in Tamper Alarm (Unsealed)
- = Zone 09 is Disabled (Unused)

### BASIC REPORTING REFERENCE

A complete reporting template is available on the Solution Link CD, from your distributor or from Bosch. Your base station will need to create a specific reporting template for this and other 2nd generation Solution panels.

| Point ID Table | Module Description  |
|----------------|---------------------|
| Ur999          | Installer           |
| Ur998          | Remote User         |
| Ur001 - 256    | Users               |
| Ur000          | Quick Arm           |
| Zn301-428      | User Keyfob 1 - 128 |
| Zn891-898      | Panels 1-8          |
| Zn881-888      | Keypads 1-8         |
| Zn871-878      | Ethernet 1-8        |
| Zn861-868      | GSM 1-8             |
| Zn851-858      | Output Expander 1-8 |
| Zn841-848      | Serial Expander 1-8 |
| Zn831-838      | Lan P/Supply 1-8    |
| Zn821-828      | RF Reciever 1-8     |
| Zn811-818      | Access 1-8          |
| Zn801-808      | X10 1-8             |
| Zn781-788      | Input Expander      |
| Zn791-798      | Lift 1-8            |
| Zn001-128      | Zones               |

Table 15: Basic Reporting Code Reference Listing

|         |                                 |         |                                |
|---------|---------------------------------|---------|--------------------------------|
| ACCESS  | = Access MENU                   | SYS     | = System MENU                  |
| Ch-P in | = Change PIN Number             | CLoC    | = Set the System Clock         |
| Ch-oth  | = Change Other PIN Number       | St-on   | = Set Daylight Saving On Time  |
| urArEA  | = Assign Areas to User          | St-off  | = Set Daylight Saving Off Time |
| AddP in | = Add New PIN                   | H iSLoG | = View History Log             |
| AddPro  | = Add Prox Token                | SendLoG | = Send Log                     |
| AddFob  | = Add RF Keyfob                 | trbl    | = View System Troubles         |
| dELP in | = Delete User PIN               | tSt-bA  | = Test Battery                 |
| dELPro  | = Delete User Prox              | About   | = Displays Firmware Version    |
| dELFob  | = Delete User RF Keyfob         |         |                                |
| dEL-ur  | = Erase User                    | L000    | = Location 000                 |
|         |                                 | d= 14   | = Data equals 14               |
| ArEA    | = Area MENU                     | A=      | = Enter Area Number            |
| ChonoF  | = Turn Chime Mode On/Off        | A= 6    | = Area 6 Selected              |
| Ch tYP  | = Change Chime Mode             | oP=     | = Enter Output Number          |
|         |                                 | zn=     | = Enter Zone Number            |
| inPut   | = Input MENU                    | ur=     | = Enter User Number            |
| StAtUS  | = Input Status                  | oP=     | = Enter Output Number          |
| bYPASS  | = Bypass Mode                   | cP=     | = Enter Keypad Number          |
| Fire-r  | = Reset Fire / Smoke Sensors    | h iS    | = Max Possible number is 5     |
| Ch-zn   | = Set Chime Zones               | EntP in | = Enter PIN Number             |
| Pt2-zn  | = Set Part Mode 2 Zones         | dd =22  | = Date = 22nd                  |
| tSt-zn  | = Test a Zone                   | !!! =06 | = Month = June                 |
| tStznS  | = Test All Zones                | yy =07  | = Year = 2007                  |
|         |                                 | P001    | = Panel 1                      |
| OutPut  | = Output MENU                   | CP-001  | = Keypad 1                     |
| StAtUS  | = Output Status                 | E 148   | = History Log Event 148        |
| on-off  | = Turn Output On/Off            | Ph tSt  | = Communication Test           |
| tStS ir | = Test External Siren           | Ch on   | = Chime Mode ON                |
| tSt int | = Test Internal Siren           | Ch off  | = Chime Mode OFF               |
| tStStr  | = Test Strobe                   | U= 1.00 | = Software Version 1.00        |
|         |                                 | t= 19C  | = Temperature = 19°C           |
| d iALEr | = Dialer MENU                   | U= 13.8 | = Voltage = 13.8V              |
| SEt-Ph  | = Set Domestic Phone Number     | on      | = On                           |
| CFonoF  | = Turn Call Forwarding On / Off | off     | = Off                          |
| CFonPh  | = Call Forward On Number        | LEAVE   | = Exit Now                     |
| CFoFPh  | = Call Forward Off Number       | End     | = Exit Programming Mode        |
| CALAnS  | = Call / Answer RAS Software    |         |                                |
| d irCon | = Start Direct Connect          | dAtE    | = Clock Not Set                |
| CuSrEG  | = Customer Registration         | dEFP in | = Default PIN Trouble          |
| tSt-dL  | = Perform Dialer Test           | CAbtPr  | = Cabinet Tamper               |
|         |                                 | no tEL  | = No Telephone Line            |
| dEU iCE | = Device MENU                   | no bAt  | = No Battery                   |
| CP-uol  | = Keypad Volume                 | FA iL   | = Battery Test Failed          |
| CP-Con  | = Keypad Contrast               | route 1 | = Comms Fail Route 1           |
| CP-bl   | = Keypad Backlight              | route 2 | = Comms Fail Route 2           |
| CP-dEG  | = Set Keypad Temp Alarm         | no bYP  | = No Bypass Allowed            |
| LAN-St  | = LAN Status                    | EoL=no  | = EOL Resistor Open Circuit    |

Figure 32: Text Menu Examples

## PROGRAMMING LOCATIONS REFERENCE TABLE

The Solution 16i panel includes a simple text menu system which makes all levels of programming extremely easy. Once a valid PIN has been entered followed by the MENU key the system will automatically determine which menus and option the user has access to and only those items will be displayed.

There are four basic grouping levels used;

A = All (No PIN Required)

U = User PIN Has Access

M = Master PIN Has Access

I = Installer PIN Has Access

The following table lists all programming locations and the authority level required to access them.

| 0           | Commands | 1                   | Access                       | 2                          | Areas |
|-------------|----------|---------------------|------------------------------|----------------------------|-------|
| <b>UMI</b>  | 2-0-1    | Turn Area On/Off    |                              |                            |       |
| <b>UMI</b>  | 2-0-2    | Turn All Areas On   |                              |                            |       |
| <b>UMI</b>  | 2-0-3    | Turn All Areas Off  |                              |                            |       |
| <b>UMI</b>  | 2-0-4    | Move To Area        |                              |                            |       |
| <b>AUMI</b> | 2-0-5    | Chime On/Off        |                              |                            |       |
| <b>UMI</b>  | 1-1-0    | Change Own PIN      |                              |                            |       |
| <b>AUMI</b> | 3-0-0    | Zone Status         |                              |                            |       |
| <b>AUMI</b> | 4-0-0    | Output Status       |                              |                            |       |
| <b>UMI</b>  | 4-0-1    | Turn Output On/Off  |                              |                            |       |
| <b>MI</b>   | 7-1-0    | Set Date & Time     |                              |                            |       |
| <b>UMI</b>  | 3-0-5    | Smoke Sensor Reset  |                              |                            |       |
| <b>UMI</b>  | 3-9-0    | Walk Test All Zones |                              |                            |       |
| <b>MI</b>   | 4-9-0    | External Siren Test |                              |                            |       |
| <b>MI</b>   | 4-9-1    | Internal Siren Test |                              |                            |       |
| <b>MI</b>   | 4-9-2    | Strobe Test         |                              |                            |       |
| <b>MI</b>   | 5-0-0    | Set Domestic Number |                              |                            |       |
| <b>UMI</b>  | 5-0-1    | Call/Answer RAS     |                              |                            |       |
| <b>UMI</b>  | 7-9-1    | Battery Test        |                              |                            |       |
| <b>UMI</b>  | 5-9-0    | Test Dialler        |                              |                            |       |
| <b>I</b>    | 7-0-8    | Service Mode        |                              |                            |       |
| <b>UMI</b>  |          | About               |                              |                            |       |
|             |          |                     | <b>1-0 Commands</b>          |                            |       |
| <b>MI</b>   | 1-0-0    | Erase User          |                              |                            |       |
|             |          |                     | <b>1-1 PIN Codes</b>         |                            |       |
| <b>UMI</b>  | 1-1-0    | Change Own PIN      |                              |                            |       |
| <b>M</b>    | 1-1-1    | Change Other PIN    |                              |                            |       |
| <b>MI</b>   | 1-1-2    | Add PIN             |                              |                            |       |
| <b>MI</b>   | 1-1-3    | Delete PIN          |                              |                            |       |
| <b>I</b>    | 1-1-4    | View PIN            |                              |                            |       |
|             |          |                     | <b>1-2 Token</b>             |                            |       |
| <b>MI</b>   | 1-2-0    | Add Token           |                              |                            |       |
| <b>MI</b>   | 1-2-1    | Delete Token        |                              |                            |       |
| <b>MI</b>   | 1-2-2    | Token Status        |                              |                            |       |
|             |          |                     | <b>1-3 RF Keyfob</b>         |                            |       |
| <b>MI</b>   | 1-3-0    | Add Keyfob          |                              |                            |       |
| <b>MI</b>   | 1-3-1    | Delete Keyfob       |                              |                            |       |
| <b>I</b>    | 1-3-2    | Test Keyfob         |                              |                            |       |
|             |          |                     | <b>1-4 User Properties</b>   |                            |       |
| <b>MI</b>   | 1-4-0    | User Name           |                              |                            |       |
| <b>MI</b>   | 1-4-1    | Area Assignment     |                              |                            |       |
| <b>I</b>    | 1-4-2    | User Options        |                              |                            |       |
| <b>MI</b>   | 1-4-4    | Timer Group         |                              |                            |       |
| <b>MI</b>   | 1-4-5    | Access Assignment   |                              |                            |       |
|             |          |                     | <b>1-5 Global Properties</b> |                            |       |
| <b>I</b>    | 1-5-0    | PIN Length          |                              |                            |       |
| <b>I</b>    | 1-5-1    | PIN Retry Count     |                              |                            |       |
| <b>I</b>    | 1-5-2    | Installer PIN       |                              |                            |       |
| <b>I</b>    | 1-5-3    | PIN Expire Time     |                              |                            |       |
|             |          |                     | <b>1-6 Prox Reader</b>       |                            |       |
| <b>I</b>    | 1-6-0    | Name                |                              |                            |       |
| <b>I</b>    | 1-6-1    | Area Assignment     |                              |                            |       |
| <b>I</b>    | 1-6-2    | Access Group        |                              |                            |       |
| <b>I</b>    | 1-6-3    | Reader Options      |                              |                            |       |
|             |          |                     |                              | <b>2-0 Commands</b>        |       |
| <b>AUMI</b> | 2-0-0    | Area Status         |                              |                            |       |
| <b>UMI</b>  | 2-0-1    | Turn Area On/Off    |                              |                            |       |
| <b>UMI</b>  | 2-0-2    | Turn All Areas On   |                              |                            |       |
| <b>UMI</b>  | 2-0-3    | Turn All Areas Off  |                              |                            |       |
| <b>UMI</b>  | 2-0-4    | Move To Area        |                              |                            |       |
| <b>AUMI</b> | 2-0-5    | Chime On/Off        |                              |                            |       |
| <b>UMI</b>  | 2-0-6    | Chime Mode          |                              |                            |       |
|             |          |                     |                              | <b>2-1 Area Properties</b> |       |
| <b>MI</b>   | 2-1-0    | Area Name           |                              |                            |       |
| <b>I</b>    | 2-1-1    | General Options     |                              |                            |       |
| <b>I</b>    | 2-1-2    | Input Options       |                              |                            |       |
| <b>I</b>    | 2-1-3    | Output Options      |                              |                            |       |
| <b>I</b>    | 2-1-4    | Reporting Options   |                              |                            |       |
| <b>I</b>    | 2-1-5    | Strobe Trigger      |                              |                            |       |
|             |          |                     |                              | <b>2-2 Reporting</b>       |       |
| <b>I</b>    | 2-2-0    | Account Dest 1      |                              |                            |       |
| <b>I</b>    | 2-2-1    | Account Dest 2      |                              |                            |       |
| <b>I</b>    | 2-2-2    | Open Close Route    |                              |                            |       |
|             |          |                     |                              | <b>2-9 Area Testing</b>    |       |
| <b>I</b>    | 2-9-0    | Area Watch          |                              |                            |       |
| <b>I</b>    | 2-9-1    | User Test Interval  |                              |                            |       |
| <b>I</b>    | 2-9-2    | Service Interval    |                              |                            |       |
| <b>I</b>    | 2-9-3    | Test Options        |                              |                            |       |



**3 Inputs****3-0 Commands**

|            |       |                    |
|------------|-------|--------------------|
| <b>AMI</b> | 3-0-0 | Zone Status        |
| <b>I</b>   | 3-0-1 | Zone Array         |
| <b>UMI</b> | 3-0-2 | Bypass Zones       |
| <b>MI</b>  | 3-0-3 | Set Chime Zones    |
| <b>MI</b>  | 3-0-4 | Set Part 2 Zones   |
| <b>UMI</b> | 3-0-5 | Smoke Sensor Reset |

**3-1 Zone Properties**

|           |       |                  |
|-----------|-------|------------------|
| <b>MI</b> | 3-1-0 | Zone Name        |
| <b>I</b>  | 3-1-1 | Zone Type        |
| <b>I</b>  | 3-1-2 | Area Assignment  |
| <b>I</b>  | 3-1-3 | Pulse Count      |
| <b>I</b>  | 3-1-4 | Pulse Count Time |
| <b>I</b>  | 3-1-5 | Access Group     |
| <b>I</b>  | 3-1-6 | Report Route     |
| <b>I</b>  | 3-1-7 | Report Options   |
| <b>I</b>  | 3-1-8 | Zone Options     |

**3-3 RF Zone**

|          |       |                  |
|----------|-------|------------------|
| <b>I</b> | 3-3-0 | Add RF Device    |
| <b>I</b> | 3-3-1 | Delete RF Device |
| <b>I</b> | 3-3-2 | Test RF Device   |

**3-4 Global Input Options**

|          |       |                   |
|----------|-------|-------------------|
| <b>I</b> | 3-4-0 | EOL Value         |
| <b>I</b> | 3-4-1 | Keyswitch Options |
| <b>I</b> | 3-4-2 | Input Options     |

**3-5 PGM Input**

|          |       |            |
|----------|-------|------------|
| <b>I</b> | 3-5-0 | Input Type |
|----------|-------|------------|

**3-6 Tamper Inputs**

|          |       |                |
|----------|-------|----------------|
| <b>I</b> | 3-6-0 | Tamper Options |
|----------|-------|----------------|

**3-9 Input Testing**

|            |       |                     |
|------------|-------|---------------------|
| <b>UMI</b> | 3-9-0 | Walk Test All Zones |
| <b>UMI</b> | 3-9-1 | Walk Test A Zone    |
| <b>I</b>   | 3-9-2 | Sensor Watch Time   |

**4 Outputs****4-0 Commands**

|             |       |                    |
|-------------|-------|--------------------|
| <b>AUMI</b> | 4-0-0 | Output Status      |
| <b>UMI</b>  | 4-0-1 | Turn Output On/Off |

**4-1 Properties**

|           |       |                  |
|-----------|-------|------------------|
| <b>MI</b> | 4-1-0 | Output Name      |
| <b>I</b>  | 4-1-1 | Event Type       |
| <b>I</b>  | 4-1-2 | Event Assignment |
| <b>I</b>  | 4-1-3 | Output Polarity  |
| <b>I</b>  | 4-1-4 | Timer Parameter  |
| <b>I</b>  | 4-1-5 | Output Options   |
| <b>I</b>  | 4-1-6 | Macro Group      |

**4-9 Output Testing**

|           |       |                     |
|-----------|-------|---------------------|
| <b>MI</b> | 4-9-0 | External Siren Test |
| <b>MI</b> | 4-9-1 | Internal Siren Test |
| <b>MI</b> | 4-9-2 | Strobe Test         |

**5 Comms****5-0 Commands**

|            |       |                     |
|------------|-------|---------------------|
| <b>MI</b>  | 5-0-0 | Set Domestic Number |
| <b>UMI</b> | 5-0-1 | Call /Answer RAS    |
| <b>MI</b>  | 5-0-2 | Call Forward On/Off |
| <b>MI</b>  | 5-0-3 | Check Web Email     |
| <b>MI</b>  | 5-0-4 | Email System Log    |
| <b>MI</b>  | 5-0-5 | Start Direct Link   |
|            | 5-0-6 | Reserved            |
|            | 5-0-7 | Reserved            |
|            | 5-0-8 | Register Customer   |
| <b>I</b>   | 5-0-9 | Register Installer  |

**5-1 Telephone Numbers**

|           |       |                  |
|-----------|-------|------------------|
| <b>I</b>  | 5-1-0 | Number Prefix    |
| <b>I</b>  | 5-1-1 | Primary Dest 1   |
| <b>I</b>  | 5-1-2 | Secondary Dest 1 |
| <b>I</b>  | 5-1-3 | Primary Dest 2   |
| <b>I</b>  | 5-1-4 | Secondary Dest 2 |
| <b>MI</b> | 5-1-5 | Domestic Numbers |
| <b>MI</b> | 5-1-6 | Call Forward On  |
| <b>MI</b> | 5-1-7 | Call Forward Off |

**5-2 Properties**

|          |       |                    |
|----------|-------|--------------------|
| <b>I</b> | 5-2-0 | Call Attempt Count |
| <b>I</b> | 5-2-1 | Dialler Options    |
| <b>I</b> | 5-2-2 | Phone Line Options |
| <b>I</b> | 5-2-3 | Country            |
| <b>I</b> | 5-2-7 | Set SMS Password   |

**5-3 Remote Access**

|          |       |                       |
|----------|-------|-----------------------|
| <b>I</b> | 5-3-0 | Call Back Number      |
| <b>I</b> | 5-3-1 | RAS Security PIN      |
| <b>I</b> | 5-3-2 | Log Threshold         |
| <b>I</b> | 5-3-3 | Ring Count            |
| <b>I</b> | 5-3-4 | RAS Options           |
| <b>I</b> | 5-3-5 | DTMF Options          |
| <b>I</b> | 5-3-6 | Voice Access Code     |
| <b>I</b> | 5-3-7 | CLI Numbers           |
| <b>I</b> | 5-3-8 | User RAS Security PIN |

**5-4 Dialler Reporting**

|          |       |                   |
|----------|-------|-------------------|
| <b>I</b> | 5-4-0 | TX Format Dest 1  |
| <b>I</b> | 5-4-1 | TX Format Dest 2  |
| <b>I</b> | 5-4-2 | Test Route        |
| <b>I</b> | 5-4-3 | System Route      |
| <b>I</b> | 5-4-4 | Emergency Route   |
| <b>I</b> | 5-4-5 | Swinger Dialler   |
| <b>I</b> | 5-4-6 | Burg Report Delay |
| <b>I</b> | 5-4-7 | Fire Report Delay |

**5-9 Comms Test**

|            |       |                     |
|------------|-------|---------------------|
| <b>UMI</b> | 5-9-0 | Send Test Report    |
| <b>I</b>   | 5-9-1 | Test Report Time    |
| <b>I</b>   | 5-9-2 | Test Report Period  |
| <b>I</b>   | 5-9-3 | Test Report Options |
| <b>I</b>   | 5-9-4 | Test Route          |
| <b>I</b>   | 5-9-5 | Dial Number Test    |

| <b>6 Devices</b>             |                         | <b>7 System</b>            |                           |
|------------------------------|-------------------------|----------------------------|---------------------------|
| <b>6-0 Commands</b>          |                         | <b>7-0 Commands</b>        |                           |
| <b>UMI</b>                   | 6-0-0 LAN Status        | <b>UMI</b>                 | 7-0-0 Panel Status        |
| <b>I</b>                     | 6-0-1 LAN Secure        | <b>UMI</b>                 | 7-0-1 System Trouble      |
| <b>6-1 Keypads</b>           |                         | <b>UMI</b>                 | 7-0-2 History Log         |
| <b>MI</b>                    | 6-1-0 Volume            | <b>I</b>                   | 7-0-3 Domestic Default    |
| <b>MI</b>                    | 6-1-1 Contrast          | <b>I</b>                   | 7-0-4 Factory Default     |
| <b>MI</b>                    | 6-1-2 Backlight         | <b>I</b>                   | 7-0-5 Template Default    |
| <b>I</b>                     | 6-1-3 Home Area         | <b>I</b>                   | 7-0-8 Service Mode        |
| <b>I</b>                     | 6-1-4 General Options   | <b>7-1 Clock</b>           |                           |
| <b>I</b>                     | 6-1-5 Beeper Options    | <b>MI</b>                  | 7-1-0 Set Date & Time     |
| <b>I</b>                     | 6-1-6 Emergency Keys    | <b>I</b>                   | 7-1-1 Summertime On       |
| <b>I</b>                     | 6-1-7 Access Group      | <b>I</b>                   | 7-1-2 Summertime Off      |
| <b>I</b>                     | 6-1-8 Lockout Time      | <b>7-2 Timers</b>          |                           |
| <b>6-2 RF Devices</b>        |                         | <b>I</b>                   | 7-2-0 Exit Time           |
| <b>I</b>                     | 6-2-0 Receiver Options  | <b>I</b>                   | 7-2-1 Entry Time 1        |
| <b>I</b>                     | 6-2-1 Supervision Time  | <b>I</b>                   | 7-2-2 Entry Time 2        |
| <b>I</b>                     | 6-2-2 RF Device Options | <b>I</b>                   | 7-2-3 Part Entry Time     |
| <b>I</b>                     | 6-2-3 Add RF Keypad     | <b>I</b>                   | 7-2-4 Auto Arm Pre Alert  |
| <b>I</b>                     | 6-2-4 Delete RF Keypad  | <b>I</b>                   | 7-2-5 Output Pre Alert    |
| <b>I</b>                     | 6-2-5 View RF Device ID | <b>I</b>                   | 7-2-6 Senior Watch Time   |
| <b>6-3 Serial Device</b>     |                         | <b>7-3 Power</b>           |                           |
| <b>I</b>                     | 6-3-0 Device Type       | <b>I</b>                   | 7-3-0 AC Options          |
| <b>I</b>                     | 6-3-1 Baud Rate         | <b>I</b>                   | 7-3-1 Battery Options     |
| <b>I</b>                     | 6-3-2 Flow Control      | <b>I</b>                   | 7-3-2 Fuse Options        |
| <b>6-5 GSM Modem</b>         |                         | <b>7-4 Siren</b>           |                           |
| <b>6-6 Ethernet</b>          |                         | <b>I</b>                   | 7-4-0 Tone                |
| <b>6-7 Access Controller</b> |                         | <b>I</b>                   | 7-4-1 Speed               |
| <b>6-8 X10 Device</b>        |                         | <b>I</b>                   | 7-4-2 Volume              |
|                              |                         | <b>I</b>                   | 7-4-3 Swinger Siren       |
|                              |                         | <b>7-5 Schedules (TEF)</b> |                           |
| <b>MI</b>                    |                         | <b>MI</b>                  | 7-5-0 Name                |
| <b>MI</b>                    |                         | <b>MI</b>                  | 7-5-1 Time                |
| <b>MI</b>                    |                         | <b>MI</b>                  | 7-5-2 Day                 |
| <b>I</b>                     |                         | <b>I</b>                   | 7-5-3 Function            |
| <b>I</b>                     |                         | <b>I</b>                   | 7-5-4 Index               |
|                              |                         | <b>7-6 Holidays</b>        |                           |
| <b>MI</b>                    |                         | <b>MI</b>                  | 7-6-0 Name                |
| <b>MI</b>                    |                         | <b>MI</b>                  | 7-6-1 Start Stop Dates    |
|                              |                         | <b>7-7 System Options</b>  |                           |
| <b>I</b>                     |                         | <b>I</b>                   | 7-7-0 General Options     |
| <b>I</b>                     |                         | <b>I</b>                   | 7-7-1 Area Options        |
| <b>I</b>                     |                         | <b>I</b>                   | 7-7-2 Keypad Idle Screen  |
| <b>MI</b>                    |                         | <b>MI</b>                  | 7-7-3 Keypad Hi/Lo Temp   |
| <b>I</b>                     |                         | <b>I</b>                   | 7-7-4 Installer Options   |
| <b>I</b>                     |                         | <b>I</b>                   | 7-7-5 Language            |
|                              |                         | <b>7-9 System Testing</b>  |                           |
| <b>UMI</b>                   |                         | <b>UMI</b>                 | 7-9-0 Walk Test All Zones |
| <b>UMI</b>                   |                         | <b>UMI</b>                 | 7-9-1 Battery Test        |

Table 16: Programming Locations and Descriptions

## PROGRAM LOCATIONS

The following section lists all of the programming locations available in the Solution 16i panel. The default values for each parameter are shown in grey.

To minimise the size of this guide only one example for some parameters is shown while the default values for the other similar parameters are listed in a table.

For example the User Default Table below shows the default values for Users 1 to 48. Similar tables are used to show Zone Defaults.

Once in Installer programming mode, you can jump to and program any location (MENU) by simply entering the location number followed by the [OK] key.

Enter LOCATION NUMBER + [OK]

## Access Programming

### User Default Table

| Parameter                 | User 1 | User 2 - 48 |
|---------------------------|--------|-------------|
| Add PIN                   | 2580   |             |
| Name                      | User 1 | User 2 - 48 |
| Area Assignment           | 1      | 1           |
| User Options              |        |             |
| Has Master PIN Privileges | Y      |             |
| Expire PIN Code           |        |             |
| Is Arm Only Code          |        |             |
| Can Bypass Zones          | Y      | Y           |
| Can Auto Bypass Zones     | Y      | Y           |
| Send 'Open/Close' Reports | Y      | Y           |
| Timer Group               |        |             |
| Access Group              |        |             |

Table 17: User Default Programming Options

Access > Commands >

**Erase User** MENU 1-0-0

Access > PIN Codes >

**Change Own PIN** MENU 1-1-0

**Change Other PIN** MENU 1-1-1

**Add PIN** MENU 1-1-2

**Delete PIN** MENU 1-1-3

**View PIN** MENU 1-1-4

Access > Token >

**Add Token** MENU 1-2-0

**Delete Token** MENU 1-2-1

**Token Status** MENU 1-2-2

Access > RF Keyfob >

**Add Keyfob** MENU 1-3-0

**Delete Keyfob** MENU 1-3-1

**Test Keyfob** MENU 1-3-2

Access > User Properties >

**User Name** MENU 1-4-0

U s e r 1 N a m e

Use [←] and [→] Keys To Scroll the Cursor Left and Right. Use Keys [0] – [9] + [1] and [4] To Select Characters. When finished press [OK] To Save. Press [OFF] To Clear From The Current Cursor Position.

Access > Global Properties >

**Area Assignment** MENU 1-4-1

|   |        |   |
|---|--------|---|
| 1 | Area 1 | Y |
| 2 | Area 2 | N |
| 3 | Area 3 | N |
| 4 | Area 4 | N |

Access > User Properties >

**User Option** MENU 1-4-2

|   |                                  |   |
|---|----------------------------------|---|
| 1 | Has Master Code Privileges       | Y |
| 2 | Expire PIN Code                  | N |
| 3 | Is Arm Only Code                 | N |
| 4 | Can Bypass Zones                 | Y |
| 5 | Can Auto Bypass Zones            | Y |
| 6 | Always Send Open / Close Reports | Y |
| 7 | Reserved                         | N |
| 8 | Reserved                         | N |

This location is a Bit option field. Press Keys [1] – [8] to turn ON and OFF the required options. The option is selected or ON when the corresponding zone indicator is on. Press [OK] To Save when finished.

Access > User Properties >

**Timer Group** MENU 1-4-4

0

Enter 1 - 8 + [OK] To Assign The User To A Timer Group – Can Only Be Assigned To One Timer Group (0 = No Timer Group)

Access > User Properties >

**Access Assignment** MENU 1-4-5

|   |                |   |
|---|----------------|---|
| 1 | Access Group 1 | N |
| 2 | Access Group 2 | N |
| 3 | Access Group 3 | N |
| 4 | Access Group 4 | N |
| 5 | Access Group 5 | N |
| 6 | Access Group 6 | N |
| 7 | Access Group 7 | N |
| 8 | Access Group 8 | N |

Multiple Groups Can Be Assigned To Each User. Press keys [1] – [8] To Toggle Groups On/Off, Then Press [OK] To Save.

Access > Global Properties >

**PIN Length** MENU 1-5-0

0 = Variable 4  
 1 = 1 Digit      4 = 4 Digits      7 = 7 Digits  
 2 = 2 Digits      5 = 5 Digits      8 = 8 Digits  
 3 = 3 Digits      6 = 6 Digits

Enter 0 - 15 + [OK] To Program The PIN Length Option.  
 (\*\* System Wide Parameter \*\*)

Access > Global Properties >

**PIN Retry Count** MENU 1-5-1

(\*\* System Wide Parameter \*\*) 6

Enter 0 - 8 + [OK] To Program The PIN Retry Count (0 = Unlimited).

Access > Global Properties >

**Installer PIN** MENU 1-5-2

1 2 3 4

Use Digits 0 - 9 To Program The Installer PIN + [OK] To Save. Installer PIN Can Be Up To 8 Digits Long. (\*\* System Wide Parameter \*\*)

Access > Global Properties >

**PIN Expire Time** MENU 1-5-3

0 3 0

(\*\* System Wide Parameter \*\*) DAYS

Enter Digits 0 - 255 + [OK] To Program How Many Days A Temporary PIN Is Valid.

Access > Prox Reader >

**Name** MENU 1-6-0

R e a d e r 1 N a m e

Use [←] and [→] Keys To Scroll the Cursor Left and Right. Use Keys [0] - [9] + [↑] and [↓] To Select Characters. When finished press [OK] To Save. Press [OFF] To Clear From The Current Cursor Position.

Access > Prox Reader >

**Area Assignment** MENU 1-6-1

1

Enter 1 - 4 (0 = Not Assigned) To Assign The Reader To An Area, Then Press [OK] To Save

Access > Prox Reader >

**Access Group** MENU 1-6-2

0

Enter 1 - 8 (0 = No Access Group) To Assign The Reader To An Access Group , Then Press [OK] To Save. Can Only Be Assigned To One Access Group

Access > Prox Reader >

**Reader Options** MENU 1-6-3

|   |                         |   |
|---|-------------------------|---|
| 1 | All On Arming Allowed   | Y |
| 2 | Disarming Allowed       | Y |
| 3 | Badging Required        | N |
| 4 | Zero Exit Time          | N |
| 5 | Part On Arming Allowed  | N |
| 6 | Arm If Single Area User | N |
| 7 | Reserved                | N |
| 8 | Arm All User Areas      | N |

This location is a Bit option field. Press Keys [1] - [8] to turn ON and OFF the required options. The option is selected or ON when the corresponding zone indicator is on. Press [OK] To Save when finished.

**Area Programming**

By default the Solution 16i is configured for one area. Examples given in this document are for Area 1 only. If the system is configured for more than one area then you will be prompted on the keypad to select the area you want to work on.

Areas > Commands >

**Area Status** MENU 2-0-0

**Turn Area On/Off** MENU 2-0-1

**Turn All Areas On** MENU 2-0-2

**Turn All Areas Off** MENU 2-0-3

**Move To Area** MENU 2-0-4

**Chime On/Off** MENU 2-0-5

**Chime Mode** MENU 2-0-6

Areas > Area Properties >

**Area Name** MENU 2-1-0

A r e a 1 N a m e

Use [←] and [→] Keys To Scroll the Cursor Left and Right. Use Keys [0] - [9] + [↑] and [↓] To Select Characters. When finished press [OK] To Save. Press [OFF] To Clear From The Current Cursor Position.

Areas > Properties >

**General Options** MENU 2-1-1

|   |  |   |
|---|--|---|
| 1 | Exit Time Restart                      | N |
| 2 | Reset Alarm Memory On Disarm           | N |
| 3 | Duress Allowed                         | Y |
| 4 | Acknowledge All Faults                 | N |
| 5 | Single Button Arming Allowed - All On  | Y |
| 6 | Single Button Arming Allowed - Part On | Y |
| 7 | Link To Common Area                    | N |
| 8 | Single Button Part Off                 | N |

This location is a Bit option field. Press Keys [1] - [8] to turn ON and OFF the required options. The option is selected or ON when the corresponding zone indicator is on. Press [OK] To Save when finished.

Areas &gt; Properties &gt;

**Input Options****MENU 2-1-2**

|   |                                      |   |
|---|--------------------------------------|---|
| 1 | Non Sequential Handover (Entry Path) | Y |
| 2 | Pulse Count Handover Allowed         | Y |
| 3 | Senior Watch                         | N |
| 4 | Reset Smoke On Arming                | Y |
| 5 | Reserved                             | N |
| 6 | Reserved                             | N |
| 7 | Reserved                             | N |
| 8 | Reserved                             | N |

This location is a Bit option field. Press Keys [1] – [8] to turn ON and OFF the required options. The option is selected or ON when the corresponding zone indicator is on. Press [OK] To Save when finished.

Areas &gt; Properties &gt;

**Output Options****MENU 2-1-3**

|   |  |   |
|---|--|---|
| 1 | Arm/Disarm Speaker Beeps Via RF Keyfob         | Y |
| 2 | Arm/Disarm Speaker Beeps Via Keypad            | Y |
| 3 | Siren / Strobe When Part On Allowed            | Y |
| 4 | Alarm On PIN Retry Violations                  | Y |
| 5 | Alarm On Exit Error                            | N |
| 6 | Alarm On Keypad Tamper ( Only If System Armed) | Y |
| 7 | Reserved                                       | N |
| 8 | Reserved                                       | N |

This location is a Bit option field. Press Keys [1] – [8] to turn ON and OFF the required options. The option is selected or ON when the corresponding zone indicator is on. Press [OK] To Save when finished.

Areas &gt; Properties &gt;

**Reporting Options****MENU 2-1-4**

|   |                                       |   |
|---|---------------------------------------|---|
| 1 | Report PIN Retry                      | Y |
| 2 | Report Exit Error                     | Y |
| 3 | Smart Lockout                         | N |
| 4 | Reserved                              | N |
| 5 | Cancel Reports                        | Y |
| 6 | Reserved                              | N |
| 7 | Open / Close Reports For Part On      | N |
| 8 | Open / Close Reports Only After Alarm | N |

This location is a Bit option field. Press Keys [1] – [8] to turn ON and OFF the required options. The option is selected or ON when the corresponding zone indicator is on. Press [OK] To Save when finished.

Areas &gt; Properties &gt;

**Strobe Trigger****MENU 2-1-5**

|   |  |   |
|---|--|---|
| 1 | Audible Burglary Alarm                     | Y |
| 2 | Silent Burglary Alarm                      | N |
| 3 | Fire Alarm                                 | Y |
| 4 | Arm / Disarm Flash Via RF Keyfob           | N |
| 5 | Arm / Disarm Flash Via Keypad or PGM Input | N |
| 6 | Reserved                                   | N |
| 7 | 24-Hour Alarm                              | Y |
| 8 | Reserved                                   | N |

This location is a Bit option field. Press Keys [1] – [8] to turn ON and OFF the required options. The option is selected or ON when the corresponding zone indicator is on. Press [OK] To Save when finished.

Areas &gt; Reporting &gt;

**Account Dest 1****MENU 2-2-0**

0 0 0 0 0 0 0 0 0 0 0 0

Program The Area Account Number For Destination 1 Here  
(Enter digits 0 – 9 + [OK] To Save)

Areas &gt; Reporting &gt;

**Account Dest 2****MENU 2-2-1**

0 0 0 0 0 0 0 0 0 0 0 0

Program The Area Account Number For Destination 2 Here.

Areas &gt; Reporting &gt;

**Open / Close Route****MENU 2-2-2**

0 = Report Events To Log Only

1

1 = Report Events To Destination 1 + Log

2 = Report Events To Destination 2 + Log

3 = Report Events To Destination 1 &amp; Destination 2 + Log

4 = Report Events To Destination 2 If Destination 1 Fails +Log

Enter 0 - 4 + [OK] To Program Which Destination 'Open' and 'Close'  
Reports Are Sent To.

Areas &gt; Area Testing &gt;

**Area Watch****MENU 2-9-0**

0 1 2

(\*\*\*) System Wide Parameter (\*\*\*)

**WEEKS**

Enter 0 – 255 + [OK] To Program The Number Of Weeks Before  
Register Inactivity Event.

Areas &gt; Area Testing &gt;

**User Test Interval****MENU 2-9-1**

0 0 0

(\*\*\*) System Wide Parameter (\*\*\*)

**DAYS**

Enter 0 – 255 + [OK] To Program The Number Of Days Before A User  
Test Is Requested.

Areas &gt; Area Testing &gt;

**Service Interval****MENU 2-9-2**

0 0 0

(\*\*\*) System Wide Parameter (\*\*\*)

**WEEKS**

Enter 0 – 255 + [OK] To Program The Number Of Weeks Between  
Installer Service Interval.

Areas &gt; Area Testing &gt;

**Test Options****MENU 2-9-3**

|   |                            |   |
|---|----------------------------|---|
| 1 | Monitor User Test Interval | Y |
| 2 | Reserved                   | N |
| 3 | Reserved                   | N |
| 4 | Reserved                   | N |
| 5 | Reserved                   | N |
| 6 | Walk Test Reports          | Y |
| 7 | Walk Test 24-Hour Zones    | N |
| 8 | Walk Test Fire Zones       | N |

This location is a Bit option field. Press Keys [1] – [8] to turn ON and OFF the required options. The option is selected or ON when the corresponding zone indicator is on. Press [OK] To Save when finished.

## Input Programming

Inputs > Commands >

**Zone Status** MENU 3-0-0

**Zone Array** MENU 3-0-1

**Bypass Zones** MENU 3-0-2

**Set Chime Zones** MENU 3-0-3

**Set Part 2 Zones** MENU 3-0-4

**Smoke Sensor Reset** MENU 3-0-5

Inputs > Zone Properties >

**Zone Name** MENU 3-1-0

|   |   |   |   |  |   |  |   |   |   |   |  |  |  |  |  |  |  |  |  |
|---|---|---|---|--|---|--|---|---|---|---|--|--|--|--|--|--|--|--|--|
| Z | o | n | e |  | 1 |  | N | a | m | e |  |  |  |  |  |  |  |  |  |
|---|---|---|---|--|---|--|---|---|---|---|--|--|--|--|--|--|--|--|--|

Use [←] and [→] Keys To Scroll the Cursor Left and Right. Use Keys [0] – [9] + [↑] and [↓] To Select Characters. When finished press [OK] To Save. Press [OFF] To Clear From The Current Cursor Position.

Inputs > Zone Properties >

**Zone Type** MENU 3-1-1

1

Enter 0 – 15 + [OK] To Program Zone Type

| Zone Types |                                      |
|------------|--------------------------------------|
| 0          | Zone Not Used                        |
| 1          | Burglary Delay 1 (Entry Timer 1)     |
| 2          | Burglary Delay 2 (Entry Timer 2)     |
| 3          | Burglary Instant 1 (With Exit Delay) |
| 4          | Burglary Instant 2 (No Exit Delay)   |
| 5          | Burglary Handover                    |
| 6          | Burglary 24-Hour                     |
| 7          | Tamper 24-Hour                       |
| 8          | Hold Up 24-Hour (Silent & Invisible) |
| 9          | Medical 24-Hour                      |
| 10         | Panic 24-Hour                        |
| 11         | Fire 24-Hour                         |
| 12         | Reserved                             |
| 13         | Keyswitch Zone                       |
| 14         | Display Only                         |
| 15         | 24-Hour Non Burglary                 |

Table 18: Zone Types

Inputs > Zone Properties >

**Area Assignment** MENU 3-1-2

1

Enter 1 – 4 + [OK] To Assign The Zone To A Single Area Only

Inputs > Zone Properties >

**Pulse Count** MENU 3-1-3

0 0

PULSES

Enter 0 – 15 + [OK] To Program The Number Of Pulses The Zone Must Register Within The Zone Pulse Count Time.

Inputs > Zone Properties >

**Pulse Count Time** MENU 3-1-4

1 2 0

SECONDS

Enter 0 – 255 + [OK] To Program The Period Of Time In Seconds That The Pulse Count Must Register.

Inputs > Zone Properties >

**Access Group** MENU 3-1-5

0

Enter 1 – 8 + [OK] To Assign The Zone To An Access Group (0 = Disabled).

Inputs > Zone Properties >

**Report Route** MENU 3-1-6

1

- 0 = Report Events To Log Only
- 1 = Report Events To Destination 1 + Log
- 2 = Report Events To Destination 2 + Log
- 3 = Report Events To Destination 1 & Destination 2 + Log
- 4 = Report Events To Destination 2 If Destination 1 Fails +Log

Enter 0 - 4 + [OK] To Set the Destination Zone Reports Are Sent To.

Inputs > Zone Properties >

**Report Options** MENU 3-1-7

|   |                 |   |
|---|-----------------|---|
| 1 | Lockout Dialler | Y |
| 2 | Report Alarm    | Y |
| 3 | Report Trouble  | Y |
| 4 | Report Bypass   | Y |
| 5 | Reserved        | N |
| 6 | Reserved        | N |
| 7 | Report Restores | Y |
| 8 | Delay Reporting | N |

This location is a Bit option field. Press Keys [1] – [8] to turn ON and OFF the required options. The option is selected or ON when the corresponding zone indicator is on. Press [OK] To Save when finished.

Inputs > Zone Properties >

**Zone Options** MENU 3-1-8

|   |                           |   |
|---|---------------------------|---|
| 1 | Lockout Siren             | Y |
| 2 | Silent Alarm              | N |
| 3 | Inverted Seal             | N |
| 4 | Bypass Allowed            | Y |
| 5 | Sensor Watch              | N |
| 6 | Armed When in Part Mode 1 | Y |
| 7 | Reserved                  | N |
| 8 | Test On Exit              | Y |

This location is a Bit option field. Press Keys [1] – [8] to turn ON and OFF the required options. The option is selected or ON when the corresponding zone indicator is on. Press [OK] To Save when finished.

Inputs > RF Zone >

**Add RF Device** MENU 3-3-0

**Delete RF Device** MENU 3-3-1

## Zone Default Table

The table below list the default values for all zone parameters in the Solution 16i. By default, zones 5 to 16 are set as Instant zones. Zones marked as Not Used do not require EOL resistors to be fitted.

| Programming Option       | Zone 1      | Zone 2       | Zone 3       | Zone 4       | Zones 5 to 16    |
|--------------------------|-------------|--------------|--------------|--------------|------------------|
| Zone Name                | Zone 1      | Zone 2       | Zone 3       | Zone 4       | Zone 5 - Zone 16 |
| Zone Type                | 1 = Delay 1 | 5 = Handover | 5 = Handover | 5 = Handover | 3 = Instant      |
| Area Assignment          | 1           | 1            | 1            | 1            | 1                |
| Pulse Count              | 0           | 0            | 0            | 0            | 0                |
| Pulse Count Time (Sec's) | 120         | 120          | 120          | 120          | 120              |
| Access Group             | 0           | 0            | 0            | 0            | 0                |
| Report Route             | 2           | 2            | 2            | 2            | 2                |
| <b>Reporting Options</b> |             |              |              |              |                  |
| Lockout Dialler          | Y           | Y            | Y            | Y            | Y                |
| Report Alarm             | Y           | Y            | Y            | Y            | Y                |
| Report Alarm Restore     | Y           | Y            | Y            | Y            | Y                |
| Report Trouble           | Y           | Y            | Y            | Y            | Y                |
| Report Trouble Restore   | Y           | Y            | Y            | Y            | Y                |
| Report Bypass            | Y           | Y            | Y            | Y            | Y                |
| Report Bypass Restore    | Y           | Y            | Y            | Y            | Y                |
| Delay Report             | N           | N            | N            | N            | N                |
| <b>Zone Options</b>      |             |              |              |              |                  |
| Lockout Siren            | Y           | Y            | Y            | Y            | Y                |
| Silent Alarm             | N           | N            | N            | N            | N                |
| Inverted Seal            | N           | N            | N            | N            | N                |
| Bypass Allowed           | Y           | Y            | Y            | Y            | Y                |
| Sensor Watch             | N           | N            | N            | N            | N                |
| Armed When Part On       | Y           | Y            | Y            | Y            | Y                |
| Reserved                 | N           | N            | N            | N            | N                |
| Test On Exit             | N           | Y            | Y            | Y            | Y                |

Table 19: Zone Defaults

### Test RF Device

**MENU 3-3-2**

Inputs > Global Input Options >

### EOL Value

**MENU 3-4-0**

0 = No EOL

5

1 = 1K0      6 = 4K7      11 = 6K8 Alarm with 2K2 Tamper

2 = 1K5      7 = 5K6      12 = 10K Alarm with 10K Tamper

3 = 2K2      8 = 6K8      13 = 22K

4 = 2K7      9 = 8K1      14 = 3K3 with 6K8 Tamper

5 = 3K3      10 = 10K      15 = Split EOL (Parallel)

(3K3 = Primary 6K8 = Secondary)

Enter 0 - 15 Then Press [OK] To Program Globally The EOL Resistor For All Zones. (\*\*\*) System Wide Parameter (\*\*\*)

Inputs > Global Input Options >

### Keyswitch Options

**MENU 3-4-1**

0 = Latching - All On/Off

5 = Momentary All On/Off

0

1 = Latching - All On

6 = Momentary - All On

2 = Latching Part On/Off

7 = Momentary - Part On/Off

3 = Latching - Part On

8 = Momentary - Part On

4 = Latching Off

9 = Momentary - Off

Enter 0 - 9 Then Press [OK] To Program How The Keyswitch Will Operate. (\*\*\*) System Wide Parameter (\*\*\*)

Inputs > Global Input Options >

### Input Options

**MENU 3-4-2**

|   |                               |   |
|---|-------------------------------|---|
| 1 | Tamper On Short               | N |
| 2 | Reserved                      | N |
| 3 | Response Time 500ms           | N |
| 4 | Reserved                      | N |
| 5 | Keyswitch Open / Close Report | Y |
| 6 | Alarm On Tamper               | N |
| 7 | Reserved                      | N |
| 8 | Reserved                      | N |

This location is a Bit option field. Press Keys [1] – [8] to turn ON and OFF the required options. The option is selected or ON when the corresponding zone indicator is on. Press [OK] To Save when finished. (\*\*\*) System Wide Parameter (\*\*\*)

Inputs > PGM Input >

### Input Type

**MENU 3-5-0**

0 = Disabled

0

1 = Latching - On/Off (RF Relay)

2 = Momentary - On/Off (RF Relay)

3 = Digiflex RF On/Off

6 = Ness Serial RF Receiver

4 = Bosch Serial RF Receiver

7 = Inovonics Serial Receiver

5 = Reserved

8 = Secure Wireless Receiver

Enter 0 - 7 + [OK] to select the interface method used for the given RF receiver.

Inputs > Tamper Inputs >

**Tamper Options** MENU 3-6-0

|   |                         |   |
|---|-------------------------|---|
| 1 | Display Panel Tamper    | Y |
| 2 | Report Panel Tamper     | Y |
| 3 | Audible Panel Tamper    | Y |
| 4 | Display Expander Tamper | Y |
| 5 | Report Expander Tamper  | Y |
| 6 | Audible Expander Tamper | Y |
| 7 | Reserved                | N |
| 8 | Reserved                | N |

This location is a Bit option field. Press Keys [1] – [8] to turn ON and OFF the required options. The option is selected or ON when the corresponding zone indicator is on. Press [OK] To Save when finished.

Inputs > Input Testing >

**Walk Test All Zones** MENU 3-9-0

**Walk Test A Zones** MENU 3-9-1

Inputs > Input Testing >

**Sensor Watch Time** MENU 3-9-2

0 3 0

DAYS

(\*\*\* System Wide Parameter \*\*\*)

Enter 0 – 255 + [OK] To Program The Sensor Watch Time In Days (0 = Disabled)

**Output Default Table**

The table below list the default values for all Output parameters in the Solution 16i. Outputs 1 to 4 are High current digital outputs. Outputs 5 to 8 are only available if the optional Output Relay Expander Boards (CM710B) are fitted. Options marked N/A = Not Applicable.

| Programming Option                   | Output 1              | Output 2            | Output 3                | Output 4              | Output 5             | Output 6             | Output 7             | Output 8             |
|--------------------------------------|-----------------------|---------------------|-------------------------|-----------------------|----------------------|----------------------|----------------------|----------------------|
| <b>Output Name</b>                   | <b>External Siren</b> | <b>Strobe Light</b> | <b>Smoke Sensor PWR</b> | <b>Internal Siren</b> | <b>Output 5 Name</b> | <b>Output 6 Name</b> | <b>Output 7 Name</b> | <b>Output 8 Name</b> |
| <b>Event Type</b>                    | 36 (External Siren)   | 48 (Strobe)         | 49 (Smoke Sensor GND)   | 37 (Internal Siren)   | 0                    | 0                    | 0                    | 0                    |
| <b>Event Assignment</b>              | 1                     | 1                   | 1                       | 1                     | 1                    | 1                    | 1                    | 1                    |
| <b>Output Polarity</b>               | 14                    | 6                   | 11                      | 6                     | 0                    | 0                    | 0                    | 0                    |
| <b>Time Parameter</b>                |                       |                     |                         |                       |                      |                      |                      |                      |
| <b>N° Of Hours</b>                   | 000                   | 008                 | 000                     | 000                   | 000                  | 000                  | 000                  | 000                  |
| <b>N° Of Minutes</b>                 | 005                   | 000                 | 000                     | 005                   | 000                  | 000                  | 000                  | 000                  |
| <b>N° Of Seconds</b>                 | 000                   | 000                 | 010                     | 000                   | 000                  | 000                  | 000                  | 000                  |
| <b>N° Of 1/10 Seconds</b>            | 000                   | 000                 | 000                     | 000                   | 000                  | 000                  | 000                  | 000                  |
| <b>Output Options</b>                |                       |                     |                         |                       |                      |                      |                      |                      |
| <b>Do not Operate If Low Battery</b> | Y                     | Y                   | Y                       | Y                     | N                    | N                    | N                    | N                    |
| <b>Display Output Overload</b>       | Y                     | Y                   | Y                       | Y                     | N/A                  | N/A                  | N/A                  | N/A                  |
| <b>Report Output Overload</b>        | Y                     | Y                   | Y                       | Y                     | N/A                  | N/A                  | N/A                  | N/A                  |
| <b>Display Missing Output Device</b> | Y                     | N                   | N                       | N                     | N/A                  | N/A                  | N/A                  | N/A                  |
| <b>Report Missing Output Device</b>  | Y                     | N                   | N                       | N                     | N/A                  | N/A                  | N/A                  | N/A                  |
| <b>Alarm On Device Fail</b>          | N                     | N                   | N                       | N                     | N/A                  | N/A                  | N/A                  | N/A                  |
| <b>Block Output If Armed All On</b>  | N                     | N                   | N                       | N                     | N                    | N                    | N                    | N                    |
| <b>Display Status On Keypad</b>      | N                     | N                   | N                       | N                     | N                    | N                    | N                    | N                    |

Table 20: Output Default Table

**Output Programming**

Outputs > Commands >

**Output Status** MENU 4-0-0

**Turn Output On/Off** MENU 4-0-1

Outputs > Properties >

**Output Name** MENU 4-1-0

O u t p u t 1 N a m e

Use [←] and [→] Keys To Scroll the Cursor Left and Right. Use Keys [0] – [9] + [↑] and [↓] To Select Characters. When finished press [OK] To Save. Press [OFF] To Clear From The Current Cursor Position.

Outputs > Properties >

**Event Type** MENU 4-1-1

0 0 0

Enter desired Event type 0 – 255 + [OK]. See Output Event Type table for available options.

Outputs > Properties >

**Event Assignment** MENU 4-1-2

0 0 1

Enter 0 to 255 to program the Area, User, Zone, Keypad or Access Group Number You Want The Output To Follow Then Press [OK]. (0 = Unrestricted all Areas, Users, Zones etc)



## Output Event Types

|                                   |   |                                     |                                     |
|-----------------------------------|---|-------------------------------------|-------------------------------------|
| 0 = Disabled                      |   |                                     |                                     |
| 1 = Battery Trouble               | P | 26 = Entry Time                     | A                                   |
| 2 = AC Trouble                    | P | 27 = Exit Time                      | A                                   |
| 3 = Telephone Line Trouble        | P | 28 = End Of Exit Time               | A                                   |
| 4 = Comm Fail – Destination 1 / 2 | P | 29 = Chime On                       | A                                   |
| 5 = Third Dialler Attempt         | P | 30 = Chime Zone Triggered           | A                                   |
| 6 = Destination 1 Reporting       | P | 31 = Auto Arm Pre-Alert             | A                                   |
| 7 = Destination 2 Reporting       | P | 32 = Ready To Arm All On            | A                                   |
| 8 = Destination 1 or 2 Kiss Off   | P | 33 = Ready To Arm Part On           | A                                   |
| 9 = Destination 1 Kiss Off        | P | 34 = Ready To Arm Part 2 On         | A                                   |
| 10 = Destination 2 Kiss Off       | P | 35 = Closing Report Sent OK         | A                                   |
| 11 = Dialler Disabled             | P | 36 = External Siren (Spk Beeps)     | A                                   |
| 12 = Horn Speaker Missing         | P | 37 = Internal Siren (Spk Beeps)     | A                                   |
| 13 = Output Trouble               | O | 38 = Alarm Any (Silent or Audible ) | A                                   |
| 14 = Panel On Line                | P | 39 = Fire Alarm                     | A                                   |
| 15 = Incoming Call                | P | 40 = Burglary Alarm                 | A                                   |
| 16 = System Trouble               | P | 41 = Silent Alarm                   | A                                   |
| 17 = Box Tamper                   | P | 42 = Duress Alarm                   | A                                   |
| 18 = Zone Trouble                 | Z | 43 = Keypad Medical                 | A                                   |
| 19 = Zone Mirror                  | Z | 44 = Keypad Fire                    | A                                   |
| 20 = Zone Alarm                   | Z | 45 = Keypad Panic                   | A                                   |
| 21 = Area Disarmed                | A | 46 = Device Tamper                  | A                                   |
| 22 = Area Armed (Any)             | A | 47 = Access Denied                  | A                                   |
| 23 = Area All On                  | A | 48 = Strobe                         | A                                   |
| 24 = Area Part On                 | A | 49 = Smoke Sensor GND               | A                                   |
| 25 = Area Part 2 On               | A | 50 = Sensor Watch                   | A                                   |
|                                   |   | 51 = Senior Watch                   | A                                   |
|                                   |   | 52 = Exit Error                     | A                                   |
|                                   |   | 53 = RF Key Fob Function 1          | A                                   |
|                                   |   | 54 = RF Key Fob Function 2          | A                                   |
|                                   |   | 55 = Output Pre-Alert               | A                                   |
|                                   |   | 56 = Follow PIN Code                | U                                   |
|                                   |   | 57 = Part Entry Time                | A                                   |
|                                   |   | 58 = Time Schedule                  | S                                   |
|                                   |   | 59 = Temperature Alarm              | K                                   |
|                                   |   | 60 = Access Group                   | G                                   |
|                                   |   |                                     | (A) = Area Event Assignment         |
|                                   |   |                                     | (P) = Panel Event Assignment        |
|                                   |   |                                     | (O) = Output Event Assignment       |
|                                   |   |                                     | (Z) = Zone Event Assignment         |
|                                   |   |                                     | (U) = User Event Assignment         |
|                                   |   |                                     | (S) = Schedule Event Assignment     |
|                                   |   |                                     | (G) = Access Group Event Assignment |
|                                   |   |                                     | (K) = Keypad                        |

Table 21: Output Event Types

Outputs > Properties >

### Output Polarity

MENU 4-1-3

0 0

Enter 0 – 14 + [OK] To Program The Output Polarity.  
See table below for available polarity types.  
Each Output Can Only Have One Option Programmed.

| Option | Polarity                               |
|--------|--|
| 0      | Normally Open Going Low                |
| 1      | Normally Open Going Low With Pre Delay |
| 2      | Normally Open Latching Low             |
| 3      | Normally Open Pulsing Low              |
| 4      | Normally Open One Shot Low             |
| 5      | Normally Open One Shot Low + Retrigger |
| 6      | Normally Open One Shot Low + Reset     |
| 7      | Normally Low Going Open                |
| 8      | Normally Low Going Open With Pre Delay |
| 9      | Normally Low Latching Open             |
| 10     | Normally Low Pulsing Open              |
| 11     | Normally Low One Shot Open             |
| 12     | Normally Low One Shot Open + Retrigger |
| 13     | Normally Low One Shot Open + Reset     |
| 14     | Horn Speaker (Output 1 or 2 Only)      |
| 15     | Reserved                               |

Table 22: Output Polarity Types

Outputs > Properties >

### Time Parameter

MENU 4-1-4

0 0 0

hh = Hour

0 0 0

nn = Minute

0 0 0

ss= Seconds

0 0 0

tt= 10<sup>th</sup> Sec

The time base parameter is only applicable for output types that are programmed as one shot or pulsing. Program 0 to 255 for each of the units (Hour, Minute, Seconds and 10th of a Second) for the time parameter. Add the units together to give the total one shot time or pulsing on/off time.

### One Shot Mode

The time base is the length of time that the output will operate.

For Example you may want a strobe output to operate for 1 hour, Either of the examples below will achieve the 1 hour time.

| Total Time | Hour | Minute | Seconds | 10th Sec |
|------------|------|--------|---------|----------|
| 60 Minutes | 001  | 000    | 000     | 000      |
| 60 Minutes | 000  | 060    | 000     | 000      |

### Pulsing Mode

The time base is the unit of time that the output will pulse on and off. If the time base is programmed for 60 seconds, the output will pulse on for 60 seconds and then off for 60 seconds (repeat) until the output is reset.





Comms > Remote Access >

**DTMF Options** MENU 5-3-5

|   |                            |   |
|---|----------------------------|---|
| 1 | DTMF Arming                | Y |
| 2 | DTMF Disarming             | N |
| 3 | DTMF User Functions        | N |
| 4 | DTMF Quick Arm ([0] + [#]) | Y |
| 5 | Reserved                   | N |
| 6 | Reserved                   | N |
| 7 | Reserved                   | N |
| 8 | Reserved                   | N |

This location is a Bit option field. Press Keys [1] – [8] to turn ON and OFF the required options. The option is selected or ON when the corresponding zone indicator is on. Press [OK] To Save when finished.

Comms > Remote Access >

**Voice Access Code** MENU 5-3-6

If a Voice Module is used enter the 2-digit access code used to access the system. Enter [0] – [9] For Digits and Use [↑] and [↓] To Toggle Special Characters.

Comms > Remote Access >

**CLI Number** MENU 5-3-7

|               |                      |                      |                      |
|---------------|----------------------|----------------------|----------------------|
| First Number  | 1                    | Digits               | 32                   |
|               | <input type="text"/> | <input type="text"/> | <input type="text"/> |
| Second Number | 1                    | Digits               | 32                   |
|               | <input type="text"/> | <input type="text"/> | <input type="text"/> |
| Third Number  | 1                    | Digits               | 32                   |
|               | <input type="text"/> | <input type="text"/> | <input type="text"/> |

Use [←] and [→] Keys To Scroll Cursor. Enter [0] – [9] For Telephone Digits. Use [↑] and [↓] To Toggle Special Characters \* # and , (Pause)



**Up to 3 Phone numbers can be entered for CLI remote access detection. You must enter STD code plus the complete number for this option to work. Press [OK] after each telephone number is entered to save and move to the next number.**

Comms > Remote Access >

**User RAS Security PIN** MENU 5-3-8

Use keys 0 - 9 To Program RAS Security PIN + [OK] To Save. This PIN is used the authenticate during end user remote access connections.

Comms > Dialler Reporting >

**TX Format Dest 1** MENU 5-4-0

- 0 = Disable 1
- 1 = Contact ID            7 = Domestic
- 2 = SIA                    8 = Voice                13 = Reserved
- 3 = Serial STU            9 = SIA +                14 = Reserved
- 4 = GSM                   10 = Reserved            15 = Reserved
- 5 = WEB MAIL            11 = Reserved
- 6 = SMS                   12 = Reserved

Enter 0 – 15 Then Press [OK] To Program The Transmission Format The Control Panel Will Use To Report To Destination 1. Only 1 Option Can Be Programmed In This Location.

Comms > Dialler Reporting >

**TX Format Dest 2** MENU 5-4-1

- 0 = Disable 1
- 1 = Contact ID            7 = Domestic
- 2 = SIA                    8 = Voice                13 = Reserved
- 3 = Serial STU            9 = SIA +                14 = Reserved
- 4 = GSM                   10 = Reserved            15 = Reserved
- 5 = WEB MAIL            11 = Reserved
- 6 = SMS                   12 = Reserved

Enter 0 – 15 Then Press [OK] To Program The Transmission Format The Control Panel Will Use To Report To Destination 2. Only 1 Option Can Be Programmed In This Location.

Comms > Dialler Reporting

**Test Route** MENU 5-4-2

- 0 = Report Events To Log Only 1
- 1 = Report Events To Destination 1 + Log
- 2 = Report Events To Destination 2 + Log
- 3 = Report Events To Destination 1 & Destination 2 + Log
- 4 = Report Events To Destination 2 If Destination 1 Fails + Log

Location 5-4-2 Sets The Report Route For Test Reports. Enter 0 - 4 + [OK]. Only One Option Can Be Selected. (\*\* System Wide Parameter \*\*)

Comms > Dialler Reporting

**Status Route** MENU 5-4-3

- 0 = Report Events To Log Only 1
- 1 = Report Events To Destination 1 + Log
- 2 = Report Events To Destination 2 + Log
- 3 = Report Events To Destination 1 & Destination 2 + Log
- 4 = Report Events To Destination 2 If Destination 1 Fails + Log

Location 5-4-3 Sets The Report Route For System Status Reports. Enter 0 - 4 + [OK]. Only One Option Can Be Selected. (\*\* System Wide Parameter \*\*)

Comms > Dialler Reporting

**Emergency Route** MENU 5-4-4

- 0 = Report Events To Log Only 1
- 1 = Report Events To Destination 1 + Log
- 2 = Report Events To Destination 2 + Log
- 3 = Report Events To Destination 1 & Destination 2 + Log
- 4 = Report Events To Destination 2 If Destination 1 Fails + Log

Location 5-4-4 Sets The Report Route For All Emergency Reports. Enter 0 - 4 + [OK]. Only One Option Can Be Selected. (\*\* System Wide Parameter \*\*)

Comms > Dialler Reporting >

**Swinger Dialler** MENU 5-4-5

Enter 0 – 15 + [OK] To Program Number Of Times The Dialler Can Report Before Lockout. (\*\* System Wide Parameter \*\*)

0 = Unlimited Attempts

Comms > Dialler Reporting >

**Burg Report Delay**

**MENU 5-4-6**

0 0 0  
SECONDS

Enter 0 – 255 seconds + [OK] To Program The Delay Time In Seconds Before Reports Are Sent. 0 = No Delay (\*\* System Wide Parameter \*\*)

Comms > Dialler Reporting >

**Fire Report Delay**

**MENU 5-4-7**

0 0 0  
SECONDS

Enter 0 – 255 seconds + [OK] To Program The Delay Time In Seconds Before Reports Are Sent. 0 = No Delay (\*\* System Wide Parameter \*\*)

Comms > Comms Test >

**Send Test Report**

**MENU 5-9-0**

Comms > Comms Test >

**Test Report Time**

**MENU 5-9-1**

Test Time  
02 : 00  
HH MM

Use the [←] and [→] keys to move to the field then [↑] and [↓] to change. Press [OK] to save or [MENU] to exit without saving.



Time is programmed in 24hour format.

Comms > Comms Test >

**Test Report Period**

**MENU 5-9-2**

- 0 = No Test Report
- 1 = Every Day
- 2 = Every Week
- 3 = Every Month

1

MENU 5-9-2 Programs The Interval Between Automatic Test Reports. Enter [0] to [3] + [OK] To Program the required value. (\*\* System Wide Parameter \*\*)

Comms > Comms Test >

**Test Report Options**

**MENU 5-9-3**

|   |   |   |
|---|---|---|
| 1 | Send Test Reports Only If No Other Report   | N |
| 2 | Send Test Reports On Siren Reset / Time Out | Y |
| 3 | Reserved                                    | N |
| 4 | Reserved                                    | N |
| 5 | Reserved                                    | N |
| 6 | Reserved                                    | N |
| 7 | Reserved                                    | N |
| 8 | Reserved                                    | N |

This location is a Bit option field. Press Keys [1] – [8] to turn ON and OFF the required options. The option is selected or ON when the corresponding zone indicator is on. Press [OK] To Save when finished.

Comms > Comms Test >

**Test Route**

**MENU 5-9-4**

- 0 = Report Events To Log Only
- 1 = Report Events To Destination 1 + Log
- 2 = Report Events To Destination 2 + Log
- 3 = Report Events To Destination 1 & Destination 2 + Log
- 4 = Report Events To Destination 2 If Destination 1 Fails + Log

1

Enter 0 - 4 + [OK]. To Enter Single Option Only. (\*\* System Wide Parameter \*\*)

Comms > Comms Test >

**Dial Number Test**

**MENU 5-9-5**

Use the option to test the system dialer to your mobile or other phone. Enter the digits to dial and press OK. The system will call the number entered. This function will stop after 30 seconds or by pressing OK. Enter [0] – [9] For Telephone Digits. Use [↑] and [↓] To Toggle Special Characters \* # and , (Pause)

**Device Programming**

Devices > Commands >

**LAN Status**

**MENU 6-0-0**

**LAN Secure**

**MENU 6-0-1**

Devices > Keypads >

**Keypad Volume**

**MENU 6-1-0**

**Keypad Contrast**

**MENU 6-1-1**

**Keypad Backlight**

**MENU 6-1-2**

Devices > Keypads >

**Home Area**

**MENU 6-1-3**

1

Enter 1 - 4 Then Press [OK] To Set The Home Area. This is the Area which will be displayed on the keypad by default.



*All keypads must have a home area programmed to work correctly.*

Devices > Keypads >

**General Options**

**MENU 6-1-4**

|   |                                   |   |
|---|-----------------------------------|---|
| 1 | Keypad Extinguish                 | N |
| 2 | Greeting On Arming                | Y |
| 3 | Greeting On Disarming             | Y |
| 4 | Enable Rear Tamper                | N |
| 5 | PIN To Change Area                | N |
| 6 | Home Area Only                    | N |
| 7 | Report/Display Keypad Temperature | N |
| 8 | Display Area ICON Indicators      | N |

This location is a Bit option field. Press Keys [1] – [8] to turn ON and OFF the required options. The option is selected or ON when the corresponding zone indicator is on. Press [OK] To Save when finished.

Devices > Keypads >

**Beeper Options** MENU 6-1-5

|   |                          |   |
|---|--------------------------|---|
| 1 | Trouble Alert Beeps      | Y |
| 2 | Entry Warning            | Y |
| 3 | Exit Warning             | Y |
| 4 | Chime Tone               | Y |
| 5 | Display Temperature      | N |
| 6 | PIN Arming Not Allowed   | N |
| 7 | Intaller PIN Not Allowed | N |
| 8 | Show Alarm When Armed    | N |

This location is a Bit option field. Press Keys [1] – [8] to turn ON and OFF the required options. The option is selected or ON when the corresponding zone indicator is on. Press [OK] To Save when finished.

Devices > Keypads >

**Emergency Keys** MENU 6-1-6

|   |   |   |
|---|---|---|
| 1 | Audible Keypad Fire                         | Y |
| 2 | Report Keypad Fire                          | Y |
| 3 | Audible Keypad Medical                      | Y |
| 4 | Report Keypad Medical                       | Y |
| 5 | Audible Keypad Panic (Invisible If Not Set) | Y |
| 6 | Report Keypad Panic                         | Y |
| 7 | Reserved                                    | N |
| 8 | Reserved                                    | N |

This location is a Bit option field. Press Keys [1] – [8] to turn ON and OFF the required options. The option is selected or ON when the corresponding zone indicator is on. Press [OK] To Save when finished.

Devices > Keypads >

**Access Group** MENU 6-1-7

0

Enter 1 - 8 + [OK] To Assign The Keypad To An Access Group.

Devices > Keypads >

**Lockout Time** MENU 6-1-8

0 6 0

SECONDS

Enter 0 – 255 + [OK] To Program The Keypad Lockout Time In Seconds. 0 = No Lockout (\*\*\*) System Wide Parameter (\*\*\*)

Devices > RF Devices >

**Receiver Options** MENU 6-2-0

|   |                                 |   |
|---|---------------------------------|---|
| 1 | Display RF Receiver Trouble     | Y |
| 2 | Alarm On RF Receiver Tamper     | Y |
| 3 | Report RF Receiver Tamper       | Y |
| 4 | Alarm On RF Receiver Jam Detect | N |
| 5 | Report RF Receiver Jam Detect   | N |
| 6 | Alarm On RF Receiver Comms Fail | Y |
| 7 | Report RF Receiver Comms Fail   | Y |
| 8 | Reserved                        | N |

This location is a Bit option field. Press Keys [1] – [8] to turn ON and OFF the required options. The option is selected or ON when the corresponding zone indicator is on. Press [OK] To Save when finished.

Device > RF Devices >

**Supervision Time** MENU 6-2-1

0 2 4

HOURS

Enter the RF Supervision Time for Devices in Hours (001 - 255 Hours)  
000 = No Supervision

Device > RF Devices >

**RF Device Options** MENU 6-2-2

|   |                                 |   |
|---|---------------------------------|---|
| 1 | Display RF Tamper               | Y |
| 2 | Report RF Tamper                | Y |
| 3 | Report RF Low Battery           | Y |
| 4 | Report Lost RF Device           | Y |
| 5 | Open Zone On Lost RF            | N |
| 6 | Audible Keyfob Panic            | Y |
| 7 | Report Keyfob Panic             | Y |
| 8 | Keyfob Function 1 Key = Part On | Y |

This location is a Bit option field. Press Keys [1] – [8] to turn ON and OFF the required options. The option is selected or ON when the corresponding zone indicator is on. Press [OK] To Save when finished.

Devices > RF Devices >

**Add RF Keypad** MENU 6-2-3

**Delete RF Keypad** MENU 6-2-4

**View RF Device ID** MENU 6-2-5

Devices > Serial Device >

**Device Type** MENU 6-3-0

- 0 = Disabled 0
- 1 = Serial Printer
- 2 = Computer

Enter 0 – 8 + [OK] To Program The Type Of Serial Device Connected To The Serial Port.

Devices > Serial Device >

**Baud Rate** MENU 6-3-1

- 0 = No Device Connected 0
- 1 = 300 Baud
- 2 = 600 Baud
- 3 = 1200 Baud
- 4 = 2400 Baud
- 5 = 9600 Baud
- 6 = 19200 Baud

Enter Digits 0 – 6 To Program The Serial Device Baud Rate, Then Press [OK] To Save.

Devices > Serial Device >

**Flow Control** MENU 6-3-2

- 0 = No Handshaking 0
- 1 = Hardware
- 2 = Xon-Xoff

Enter Digits 0 – 2 To Program The Serial Device Flow Control, Then Press [OK] To Save.

## System Programming

System > Commands >

**Panel Status** MENU 7-0-0

**System Trouble** MENU 7-0-1

**History Log** MENU 7-0-2

**Domestic Default** MENU 7-0-3

**Factory Default** MENU 7-0-4

**Template Default** MENU 7-0-5

**Service Mode** MENU 7-0-8

System > Clock >

**Set Date & Time** MENU 7-1-0

System > Clock >

**Summertime On** MENU 7-1-1

At 2:00am

|       |   |   |      |   |   |     |   |   |
|-------|---|---|------|---|---|-----|---|---|
| -     | - | - | -    | - | - | -   | - | - |
| Month |   |   | Week |   |   | Day |   |   |

Program The Month Of The Year (Jan = 01 – Dec = 12), Week Of The Month (Wk1 to Wk5=Last) and Day Of The Week (Day 1=Sun To Day 7 = Sat). Using the 0 - 9 Keys Enter The Required Values. Use the [→] Key Move To The Next Field. (\*\*\*) System Wide Parameter (\*\*\*)

System > Clock >

**Summertime Off** MENU 7-1-2

At 2:00am

|       |   |   |      |   |   |     |   |   |
|-------|---|---|------|---|---|-----|---|---|
| -     | - | - | -    | - | - | -   | - | - |
| Month |   |   | Week |   |   | Day |   |   |

Program The Month Of The Year (Jan = 01 – Dec = 12), Week Of The Month (Wk1 to Wk5=Last) and Day Of The Week (Day 1=Sun To Day 7 = Sat). Using the 0 - 9 Keys Enter The Required Values. Use the [→] Key Move To The Next Field. (\*\*\*) System Wide Parameter (\*\*\*)

System > Timers >

**Exit Time** MENU 7-2-0

|   |   |   |
|---|---|---|
| 0 | 6 | 0 |
|---|---|---|

(\*\*\*) System Wide Parameter (\*\*\*)

**SECONDS**

Enter 0 - 255 + [OK] To Program The Exit Time In Seconds.

System > Timers >

**Entry Time 1** MENU 7-2-1

|   |   |   |
|---|---|---|
| 0 | 2 | 0 |
|---|---|---|

(\*\*\*) System Wide Parameter (\*\*\*)

**SECONDS**

Enter 0 - 255 + [OK] To Program The Entry Time In Seconds.

System > Timers >

**Entry Time 2** MENU 7-2-2

|   |   |   |
|---|---|---|
| 0 | 4 | 0 |
|---|---|---|

(\*\*\*) System Wide Parameter (\*\*\*)

**SECONDS**

Enter 0 - 255 + [OK] To Program The Entry Time In Seconds.

System > Timers >

**Part Entry Time** MENU 7-2-3

|   |   |   |
|---|---|---|
| 0 | 6 | 0 |
|---|---|---|

(\*\*\*) System Wide Parameter (\*\*\*)

**SECONDS**

Enter 0 - 255 + [OK] To Program The Part Mode Entry Time In Seconds.

System > Timers >

**Auto Arm Pre-Alert** MENU 7-2-4

|   |   |   |
|---|---|---|
| 0 | 1 | 0 |
|---|---|---|

(\*\*\*) System Wide Parameter (\*\*\*)

**Minutes**

Enter Digits 0 - 255 + [OK] To Program The Pre-Alert Time In Minutes (0 = No Pre-Alert)

System > Timers >

**Output Pre-Alert** MENU 7-2-5

|   |   |   |
|---|---|---|
| 0 | 0 | 0 |
|---|---|---|

(\*\*\*) System Wide Parameter (\*\*\*)

**Minutes**

Enter Digits 0 - 255 + [OK] To Program The Pre-Alert Time In Minutes (0 = No Pre-Alert)

System > Timers >

**Senior Watch Time** MENU 7-2-6

|   |   |   |
|---|---|---|
| 0 | 0 | 0 |
|---|---|---|

(\*\*\*) System Wide Parameter (\*\*\*)

**Hours**

Enter 0 - 255 + [OK] To Program The Senior Watch Interval In Hours.

System > Power >

**AC Options** MENU 7-3-0

|   |   |   |
|---|---|---|
| 1 | Display AC Fail                                   | Y |
| 2 | Report AC Fail                                    | Y |
| 3 | Use AC To Synchronise The System Clock            | Y |
| 4 | Random AC Report 2 hour                           | N |
| 5 | Extend AC Supervision From 1 Minute To 60 Minutes | N |
| 6 | Reserved  | N |
| 7 | Reserved  | N |
| 8 | Display Clock Trouble                             | Y |

This location is a Bit option field. Press Keys [1] - [8] to turn ON and OFF the required options. The option is selected or ON when the corresponding zone indicator is on. Press [OK] To Save when finished.

System > Power >

**Battery Options** MENU 7-3-1

|   |                                   |   |
|---|-----------------------------------|---|
| 1 | Display Battery Fail              | Y |
| 2 | Report Battery Fail               | Y |
| 3 | Execute Battery Testing On Arming | Y |
| 4 | Arming Allowed On Low Battery     | Y |
| 5 | Reserved                          | N |
| 6 | Reserved                          | N |
| 7 | Reserved                          | N |
| 8 | Reserved                          | N |

This location is a Bit option field. Press Keys [1] - [8] to turn ON and OFF the required options. The option is selected or ON when the corresponding zone indicator is on. Press [OK] To Save when finished.

System > Power >

**Fuse Options** MENU 7-3-2

|   |   |   |
|---|---|---|
| 1 | Display COMM+ Current Overload Condition              | Y |
| 2 | Report COMM+ Current Overload Condition               | Y |
| 3 | Display +12V (Accessories) Current Overload Condition | Y |
| 4 | Report +12V (Accessories) Current Overload Condition  | Y |
| 5 | Display LAN+ Overload Condition                       | Y |
| 6 | Report LAN+ Overload Condition                        | Y |
| 7 | Reserved  | N |
| 8 | Reserved  | N |

This location is a Bit option field. Press Keys [1] – [8] to turn ON and OFF the required options. The option is selected or ON when the corresponding zone indicator is on. Press [OK] To Save when finished.

System > Siren >

**Tone** MENU 7-4-0

**Speed** MENU 7-4-1

**Volume** MENU 7-4-2

(\*\* System Wide Parameter \*\*)

1 5

Enter 0 – 15 + [OK] To Program Volume Of The Siren Volume (0 = Disabled / 1 = Low – 15 = High)

System > Siren >

**Swinger Siren** MENU 7-4-3

3

Enter 0 – 15 + [OK] To Program Number Of Times Siren Can Sound Before Lockout. (0 = Unlimited) (\*\* System Wide Parameter \*\*)

System > Schedules >

**Name** MENU 7-5-0

|   |   |   |   |   |   |   |   |   |   |   |   |   |  |  |
|---|---|---|---|---|---|---|---|---|---|---|---|---|--|--|
| S | c | h | e | d | u | l | e | 1 | N | a | m | e |  |  |
|---|---|---|---|---|---|---|---|---|---|---|---|---|--|--|

Use [←] and [→] Keys To Scroll the Cursor Left and Right. Use Keys [0] – [9] + [↑] and [↓] To Select Characters. When finished press [OK] To Save. Press [OFF] To Clear From The Current Cursor Position.

System > Schedules >

**Time** MENU 7-5-1

|            |   |    |  |           |   |    |  |
|------------|---|----|--|-----------|---|----|--|
| Start Time |   |    |  | Stop Time |   |    |  |
| 22         | : | 00 |  | 12        | : | 00 |  |
| HH         |   | MM |  | HH        |   | MM |  |

Using The 0 - 9 Keys Enter The Start And Stop Time As Required. You Should Enter Two Digits For Each Option eg. 4am = 04. Use The [→] key to move to the next field. Press [OK] to save or [MENU] to exit without saving.

Shh= Start Time Hours      Snn= Start Time Minutes  
Ehh= End Time Hours      Enn= End Time Minutes

**Note** Schedules are programmed in 24hour time.

System > Schedules >

**Day** MENU 7-5-2

|     |     |     |     |     |     |     |     |
|-----|-----|-----|-----|-----|-----|-----|-----|
| Sun | Mon | Tue | Wed | Thu | Fri | Sat | Hol |
| Y   | Y   | Y   | Y   | Y   | Y   | Y   | N   |

Enter 1 – 8 To Toggle Days ON/OFF. The day is active or ON when the corresponding zone indicator is on. Indicator 8 is used to set if the schedule will apply on holidays. When finished press [OK] To Save.

System > Schedules >

**Function** MENU 7-5-3

- 0 = Disabled
- 1 = Area On/Off
- 2 = Area Part On/Off
- 3 = Operate Output
- 4 = Timer Group

0

Enter 0 - 4 + [OK] To Program The Function the Schedule Will perform.

System > Schedules >

**Index** MENU 7-5-4

0

(Enter Digits 0 – 15 To Program Area, Output or Access Group Number, Then Press [OK] To Save

System > Holidays >

**Name** MENU 7-6-0

|   |   |   |   |   |   |   |   |   |   |   |  |  |  |  |
|---|---|---|---|---|---|---|---|---|---|---|--|--|--|--|
| H | o | l | i | d | a | y | N | a | m | e |  |  |  |  |
|---|---|---|---|---|---|---|---|---|---|---|--|--|--|--|

Use [←] and [→] Keys To Scroll the Cursor Left and Right. Use Keys [0] – [9] + [↑] and [↓] To Select Characters. When finished press [OK] To Save. Press [OFF] To Clear From The Current Cursor Position.

System > Holidays >

**Start Stop Dates** MENU 7-6-1

|            |     |    |     |           |     |    |     |
|------------|-----|----|-----|-----------|-----|----|-----|
| Start 12am |     |    |     | Stop 12am |     |    |     |
| 01         | Jan | 01 | Jan | 01        | Jan | 01 | Jan |
| DD         | MM  | DD | MM  | DD        | MM  | DD | MM  |

Using The 0 - 9 Keys Enter The Start And Stop Date For Each Holiday As Required. You Should Enter Two Digits For Each Option eg. June = 06. Use The [→] key to move to the next field. Press [OK] to save or [MENU] to exit without saving.

Sdd= Start Date      Snn= Start Month  
Edd= End Date      Enn= End Month



*If the start day and month and the stop day and month are equal then no holiday exists.*

System > System Options >

**General Options** MENU 7-7-0

|   |                           |   |
|---|---------------------------|---|
| 1 | Display LAN Fail          | Y |
| 2 | Report LAN Fail           | Y |
| 3 | Alarm On LAN Fail         | N |
| 4 | Reserved                  | N |
| 5 | Can Change Own PIN Code   | N |
| 6 | Monitor Default PIN Codes | Y |
| 7 | PIN Always Required       | N |
| 8 | Display Menu Numbers      | Y |

This location is a Bit option field. Press Keys [1] – [8] to turn ON and OFF the required options. The option is selected or ON when the corresponding zone indicator is on. Press [OK] To Save when finished. (\*\* System Wide Parameter \*\*)



System &gt; System Options &gt;

**Area Options****MENU 7-7-1**

|   |  |   |
|---|--|---|
| 1 | Area 1 = Common Area                   | N |
| 2 | First To Open Last To Close            | N |
| 3 | Reset Siren All Users (All Areas)      | Y |
| 4 | Power Up In Same State As Powered Down | Y |
| 5 | Fault Acknowledge All Areas            | Y |
| 6 | Delay Trouble Beeps                    | Y |
| 7 | Power Up Disarmed                      | N |
| 8 | Reserved                               | N |

This location is a Bit option field. Press Keys [1] – [8] to turn ON and OFF the required options. The option is selected or ON when the corresponding zone indicator is on. Press [OK] To Save when finished.  
(\*\*\* System Wide Parameter \*\*\*)

System &gt; Options &gt;

**Keypad Idle Screen****MENU 7-7-2**

0 = No Idle Screen

1 = Date and Time

(\*\*\* System Wide Parameter \*\*\*)

2 = Time

3 = Time + Temp Alternating

Use Keys [↑] and [↓] keys or enter 0 - 3 Then Press [OK] To Program The Keypad Idle Screen - Single Option Only.

System &gt; Options &gt;

**Keypad Hi/Lo Temp****MENU 7-7-3** °C**Hi TEMP** °C**Lo TEMP**

(\*\*\* System Wide Parameter \*\*\*)

Using The 0 - 9 Keys Enter The High / Low Keypad Monitor Temperature. You Should Enter Two Digits For Each Option eg. 9 degrees = 09. Use The [→] key to move to the next field. Press [OK] to save or [MENU] to exit without saving.  
Max Temp = 50 Min Temp = 0

System &gt; Installer Options &gt;

**Installer Options****MENU 7-7-4**

|   |                                       |   |
|---|---------------------------------------|---|
| 1 | Report/Log Entry/Exit Intstaller Menu | N |
| 2 | Report/Log Program Data Change        | Y |
| 3 | Arm Only Installer Pin                | N |
| 4 | Reserved                              | N |
| 5 | Auto Exit Installer Menu In 2 Hours   | Y |
| 6 | Auto Exit Service mode In 2 Hours     | Y |
| 7 | Reserved                              | N |
| 8 | Factory Defaulting Allowed            | Y |

This location is a Bit option field. Press Keys [1] – [8] to turn ON and OFF the required options. The option is selected or ON when the corresponding zone indicator is on. Press [OK] To Save when finished.  
(\*\*\* System Wide Parameter \*\*\*)

System &gt;Options &gt;

**Language****MENU 7-7-5**

0 = English

1 = Alternate Language

(Enter Digits 0 – 1 To Select the Primary (English) Lanuage or the Alternative Language Then Press [OK] To Save. Early Version Panels Only Support English Language.

System &gt; System Testing &gt;

**Walk Test All Zones****MENU 7-9-0****Battery Test****MENU 7-9-1****TESTING THE SYSTEM**

You will need to be in programming mode before accessing the test functions listed below.

**Walk Test**

Use the walk test command MENU 3-9-0 to test and verify that all zones work correctly.

**External Audible Test**

Use MENU 4-9-0 to test and verify that all horn speakers operate. This test will sound the horn speaker for two seconds.

**Internal Audible Test**

Use MENU 4-9-1 to test and verify that all 12 VDC sirens operate. This test will sound the siren for two seconds.

**Strobe Test**

Use MENU 4-9-2 To test and verify that the strobe operates. This test will turn on the strobe until you manually stop the test.

**Battery Test**

Use MENU 7-9-1 to test the back-up battery that is connected to the control panel.

**Communication Test**

Use MENU 5-9-0 to test the telephone reporting capability of the control panel. You can also activate a communication test by holding down the Test / Mail key on the keypad.

## SPECIFICATIONS

|  |  |  |
|--|--|--|
| <b>Panel</b>                             | Solution 16i (Part Number CC500)   |  |
| <b>Voltage Input</b>                     | 16-18V A.C. 50-60Hz - 24VA External Power Adaptor or<br>220-240V A.C. to 18V A.C. 50-60Hz - 24VA Internal Transformer (Primary Power Source)   |  |
| <b>Continuous Power</b>                  | 1 Amp MAX ( Combined power drawn from Accessory Power(+12V) Lan Power (Module LAN +) and Output Power (C+) terminals must not exceed 1 amp)  |  |
| <b>Alarm Power</b>                       | 4 Amp (Total with Primary and Secondary Power Sources Fitted)  |  |
| <b>Stand-by Battery</b>                  | 12 VDC, 7.2AH sealed rechargeable battery - Panasonic LC-P127R2P or equivalent.<br>(Secondary Power Source) Dispose of used batteries according to the instructions.   |  |
| <b>Min Operating Voltage</b>             | 10.2 VDC   |  |
| <b>Battery Charger</b>                   | Pulse by pulse charger. (Note: Charge voltage can't be measured unless battery is fitted.)   |  |
| <b>Module Connection<br/>(RS485 LAN)</b> | Max total LAN length using multi strand security cable = 300m ,<br>Max total LAN length using 2 pair twisted shielded data cable (Belden 8723) = 1500m.<br>See the product installation manual for complete wiring instructions.   |  |
| <b>Telephone Connections</b>             | RJ-12 Socket or 4-way terminal   |  |
| <b>Temperature</b>                       | 0° to 55° C  |  |
| <b>Enclosure Fixing Method</b>           | <p><b>CM700B - Small Enclosure</b><br/>Use appropriate fasteners capable of handling a minimum of 6kg to fix the cabinet against a sturdy surface using the mounting holes provided.</p> <p><b>CM710B - Large Enclosure</b><br/>Use appropriate fasteners capable of handling a minimum of 12kg to fix the cabinet against a sturdy surface using the mounting holes provided.</p> |  |
| <b>Relative Humidity</b>                 | 5 to 85% non-condensing.   |  |
| <b>Compatible Keypads</b>                | CP300i - 8 Zone ICON Keypad - White<br>CP301i - 8 Zone ICON Keypad + Prox - White  | CP510i - 16 Zone ICON Keypad - White<br>CP511i - 16 Zone ICON + Prox Keypad - White                |
| <b>Compatible Accessories</b>            | CM704B - 8/16 Zone Expander<br>CM710B - 4 Way Relay Output Module<br>CM720B - 1-Amp LAN Power Supply<br>CM195 - Multi RF Receiver Interface  | SW500B - Solution Link (RAS) Software<br>CM900 - Direct Link Interface<br>MW710B - Large Enclosure |
| <b>Enclosure Dimensions:</b>             | P/N: MW700 - (W)320, (H)260, (D)75mm<br>P/N: MW710 - (W)320, (H)520, (D)75mm   |  |
| <b>PWA Dimensions:</b>                   | (W) 235, (H) 85 (H), (D) 40mm  |  |
| <b>Warranty:</b>                         | 3 years from date of manufacture (return to base)  |  |

### The following parts are supplied with the panel

(Australian models only - content may differ in export models )

|                                |  |  |
|--------------------------------|--|--|
| <b>Panel Assembly Includes</b> | 1 x CM700B Metal Enclosure + Tamper<br>1 x Panel PWA<br>1 x User Manual  | 1 x Installer Reference Guide<br>1 x Resistor Pack   |
| <b>Resistor Pack Includes</b>  | 1 x Red Battery Lead<br>1 x Black Battery Lead<br>1 x 2-Way Shunt With Handle<br>2 x Phillips Pan Head Zinc Plated Screws<br>1 x Telephone Cable RJ12 6P/4C<br>1 x Pack PCB Mounting Clips (5 pc/pack) | 10 x 3K3 – 0.25W +/- 1% Metal Film Resistors<br>10 x 6K8 – 0.25W +/- 1% Metal Film Resistors<br>1 x 3-Way Removable Terminal Block<br>1 x Panel Tamper Switch + Tamper Lead<br>1 x Tamper Switch Bracket<br>1 x Product Identification Label |
| <b>Available Separately</b>    | Solution 16i Installation Manual Part Number BLCC500I<br>Solution Link (RAS) Software Part Number: SW500B  |  |

























































































|   |   |   |   |
|---|---|---|---|
| A =     | X =     | o =      | + =     |
| B =    | Y =    | p =     | , =    |
| C =    | Z =    | q =     | - =    |
| D =    | [ =    | r =     | . =    |
| E =    | \ =    | s =     | 0 =    |
| F =    | ] =    | t =     | 1 =    |
| G =    | ^ =    | u =     | 2 =    |
| H =    | _ =    | v =     | 3 =    |
| I =    | ` =    | w =     | 4 =    |
| J =   | a =   | x =    | 5 =   |
| K =  | b =  | y =   | 6 =  |
| L =  | c =  | z =   | 7 =  |
| M =  | d =  | SP =  | 8 =  |
| N =  | e =  | ! =   | 9 =  |
| O =  | f =  | " =   | / =  |
| P =  | g =  | # =   | : =  |
| Q =  | h =  | \$ =  | ; =  |
| R =  | i =  | % =   | < =  |
| S =  | j =  | & =   | = =  |
| T =  | k =  | ' =   | > =  |
| U =  | l =  | ( =   | ? =  |
| V =  | m =  | ) =   | @ =  |

Figure 33: Character Set

Bosch Security Systems  
25 Huntingwood Drive  
Huntingwood, NSW 2148  
Australia  
Phone: +612 9672 1777  
Facsimile: +612 9672 1717



© 2007 Bosch Security Systems  
BLCC500R  
926344  
Issue FTR1.02

**BOSCH**